


KVT-915DVD, 925DVD KVT-935DVD, 945DVD KVT-965DVD

SERVICE MANUAL TENTATIVE


KENWOOD

© 2004-3 PRINTED IN JAPAN
B53-0165-00 (N) 2703

The DVD mechanism information is not in this service manual.
Please refer to service manual for X92-4750-00 (B53-0052-00).

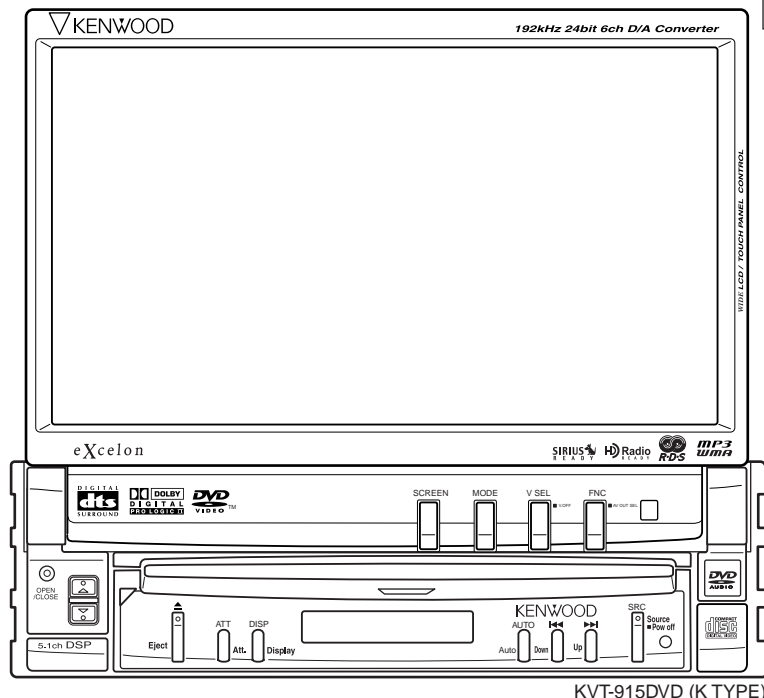


KVT-915DVD (K TYPE)

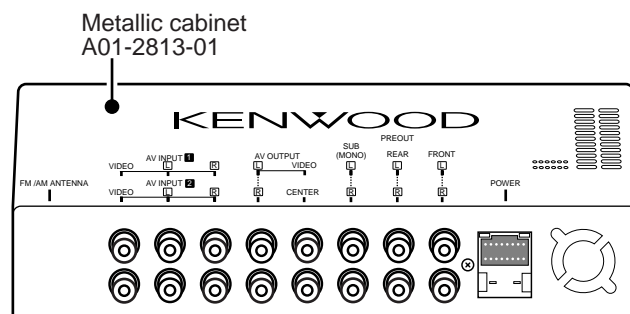

Metallic cabinet
A01-2813-01

Remote controller
A70-2046-05 (RC-DV101)

Not supplied



Lever
D10-4589-04 x2




Cleaning cloth
W01-1620-05



*Escutcheon
B07-3022-02
B07-3058-02
B07-3083-02


Mounting hardware assy
J21-9934-03

*Accessory
W01-1552-05

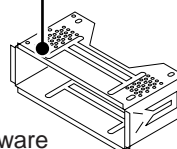

*Mounting hardware
J21-9784-04 x2




*Antenna assy
T90-0551-15 x2

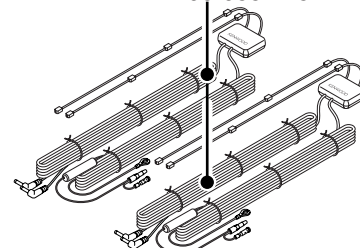

Cord with connector(BK)
E30-6171-05

Cord with connector(WH)
E30-6172-05

Plastic cabinet assy
A02-2723-03

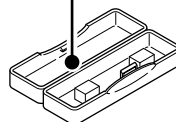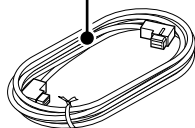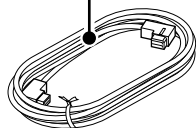


Screw set
N99-1558-05

*Screw set
N99-1723-05

Mounting hardware
J21-3801-04 x2

*Antenna adaptor
T90-0512-05

*Antenna assy
T90-0545-05

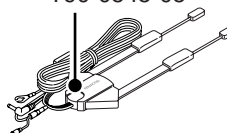






Cord with connector
E30-4953-05

*DC cord
E30-6195-05

*DC cord
E30-6196-15

*Cord with connector
E30-6197-25

*Cord with connector
E30-6241-25

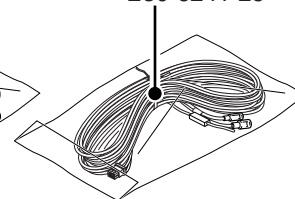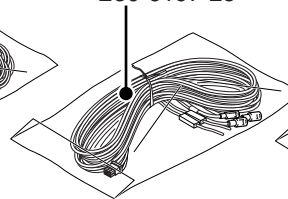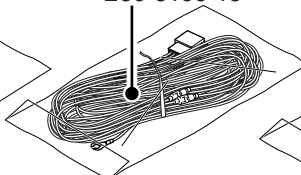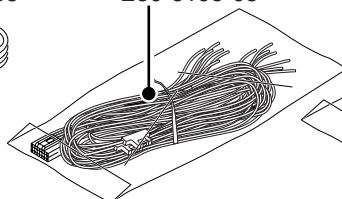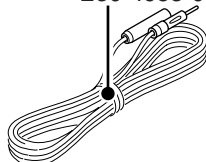


*Depends on the model. Refer to the parts list.




EXPLODED VIEW (DVD MECHANISM)

- | | | |
|---|------------|---------------|
| A | ADJUSTMENT | : N09-4495-05 |
| B | φ2x5 | : N09-4496-05 |
| C | M1.7x1.8 | : N09-6060-05 |
| D | M1.7x3.5 | : N09-6061-05 |
| E | M1.7x3.5 | : N09-6103-05 |
| F | φ2x10 | : N09-6104-05 |
| G | M1.7x2.5 | : N09-6106-05 |
| J | WASHER | : N19-2022-04 |
| K | WASHER | : N19-2171-04 |

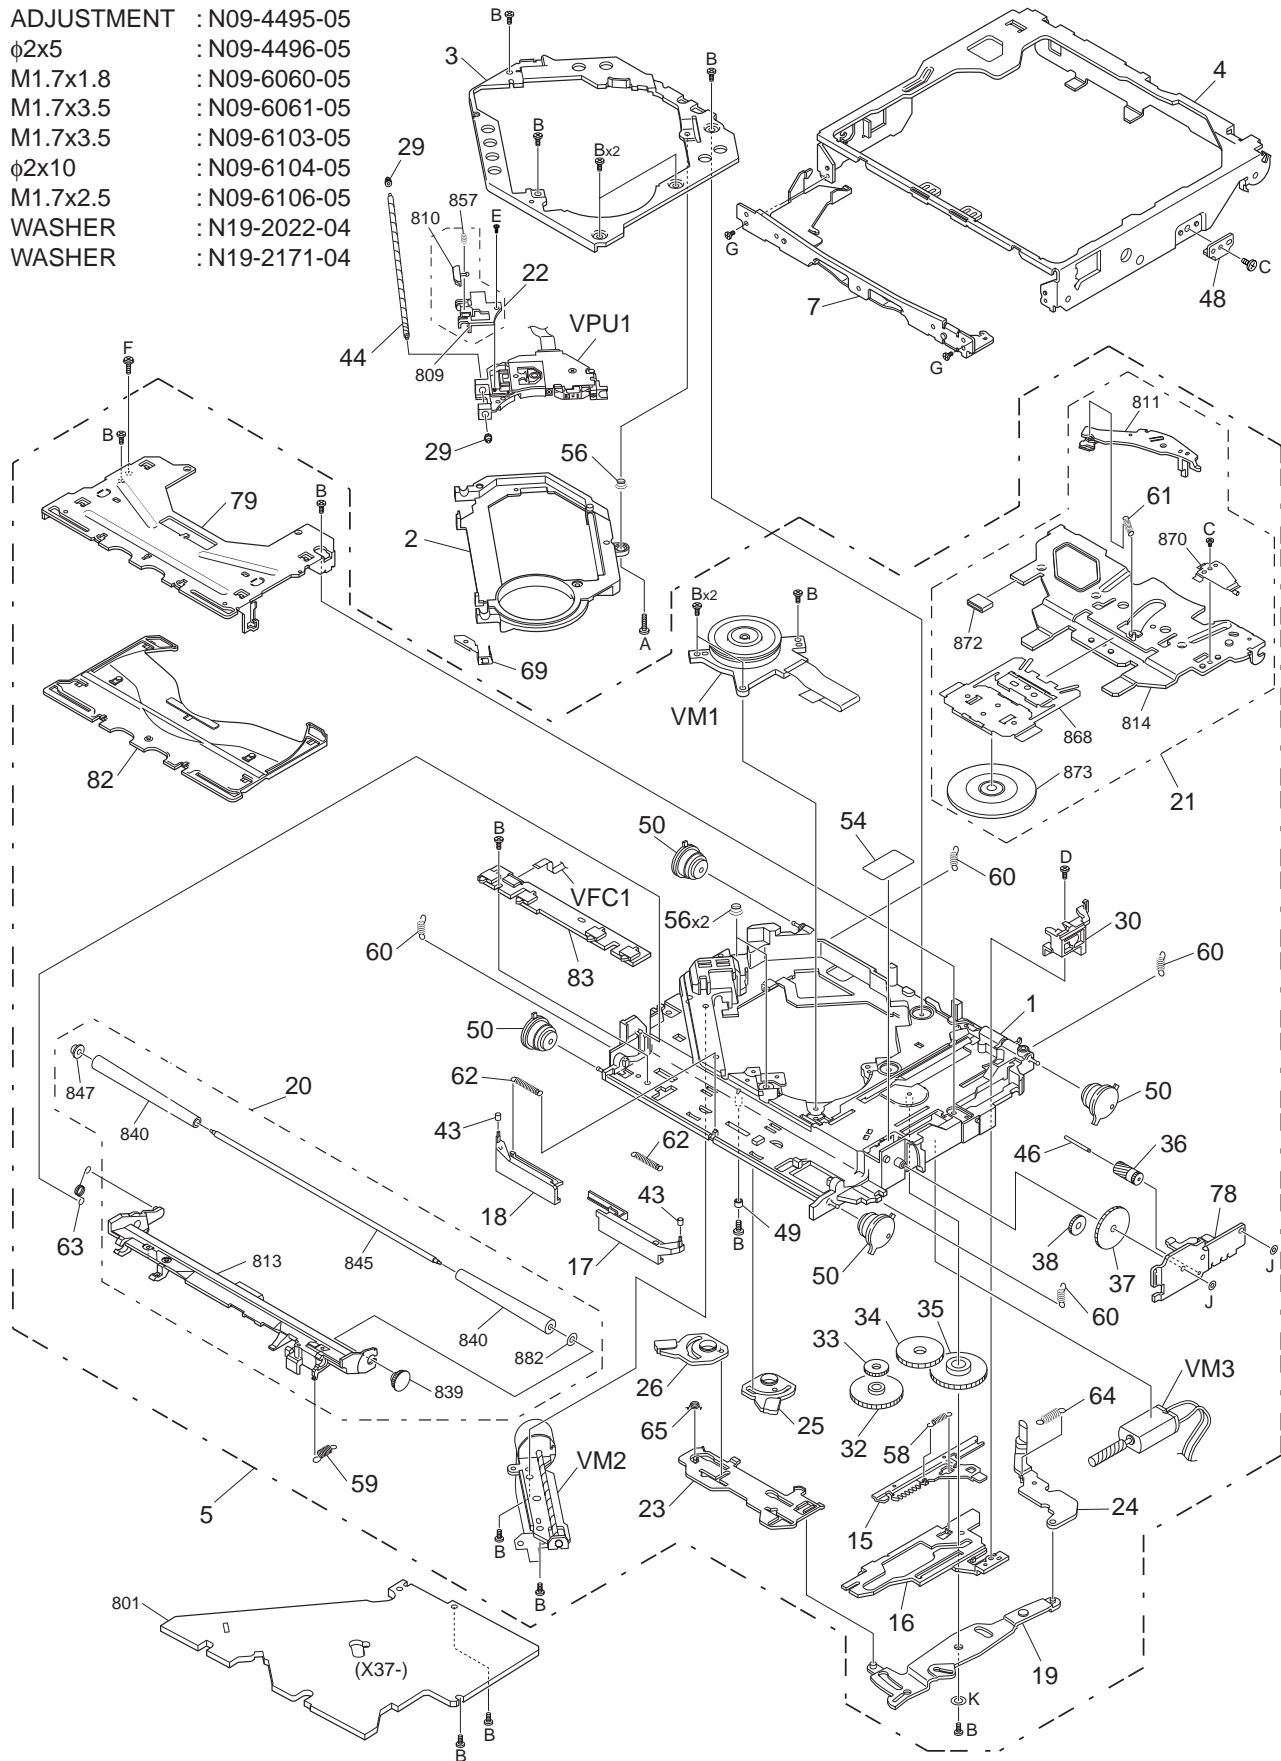


EXPLODED VIEW (UNIT)

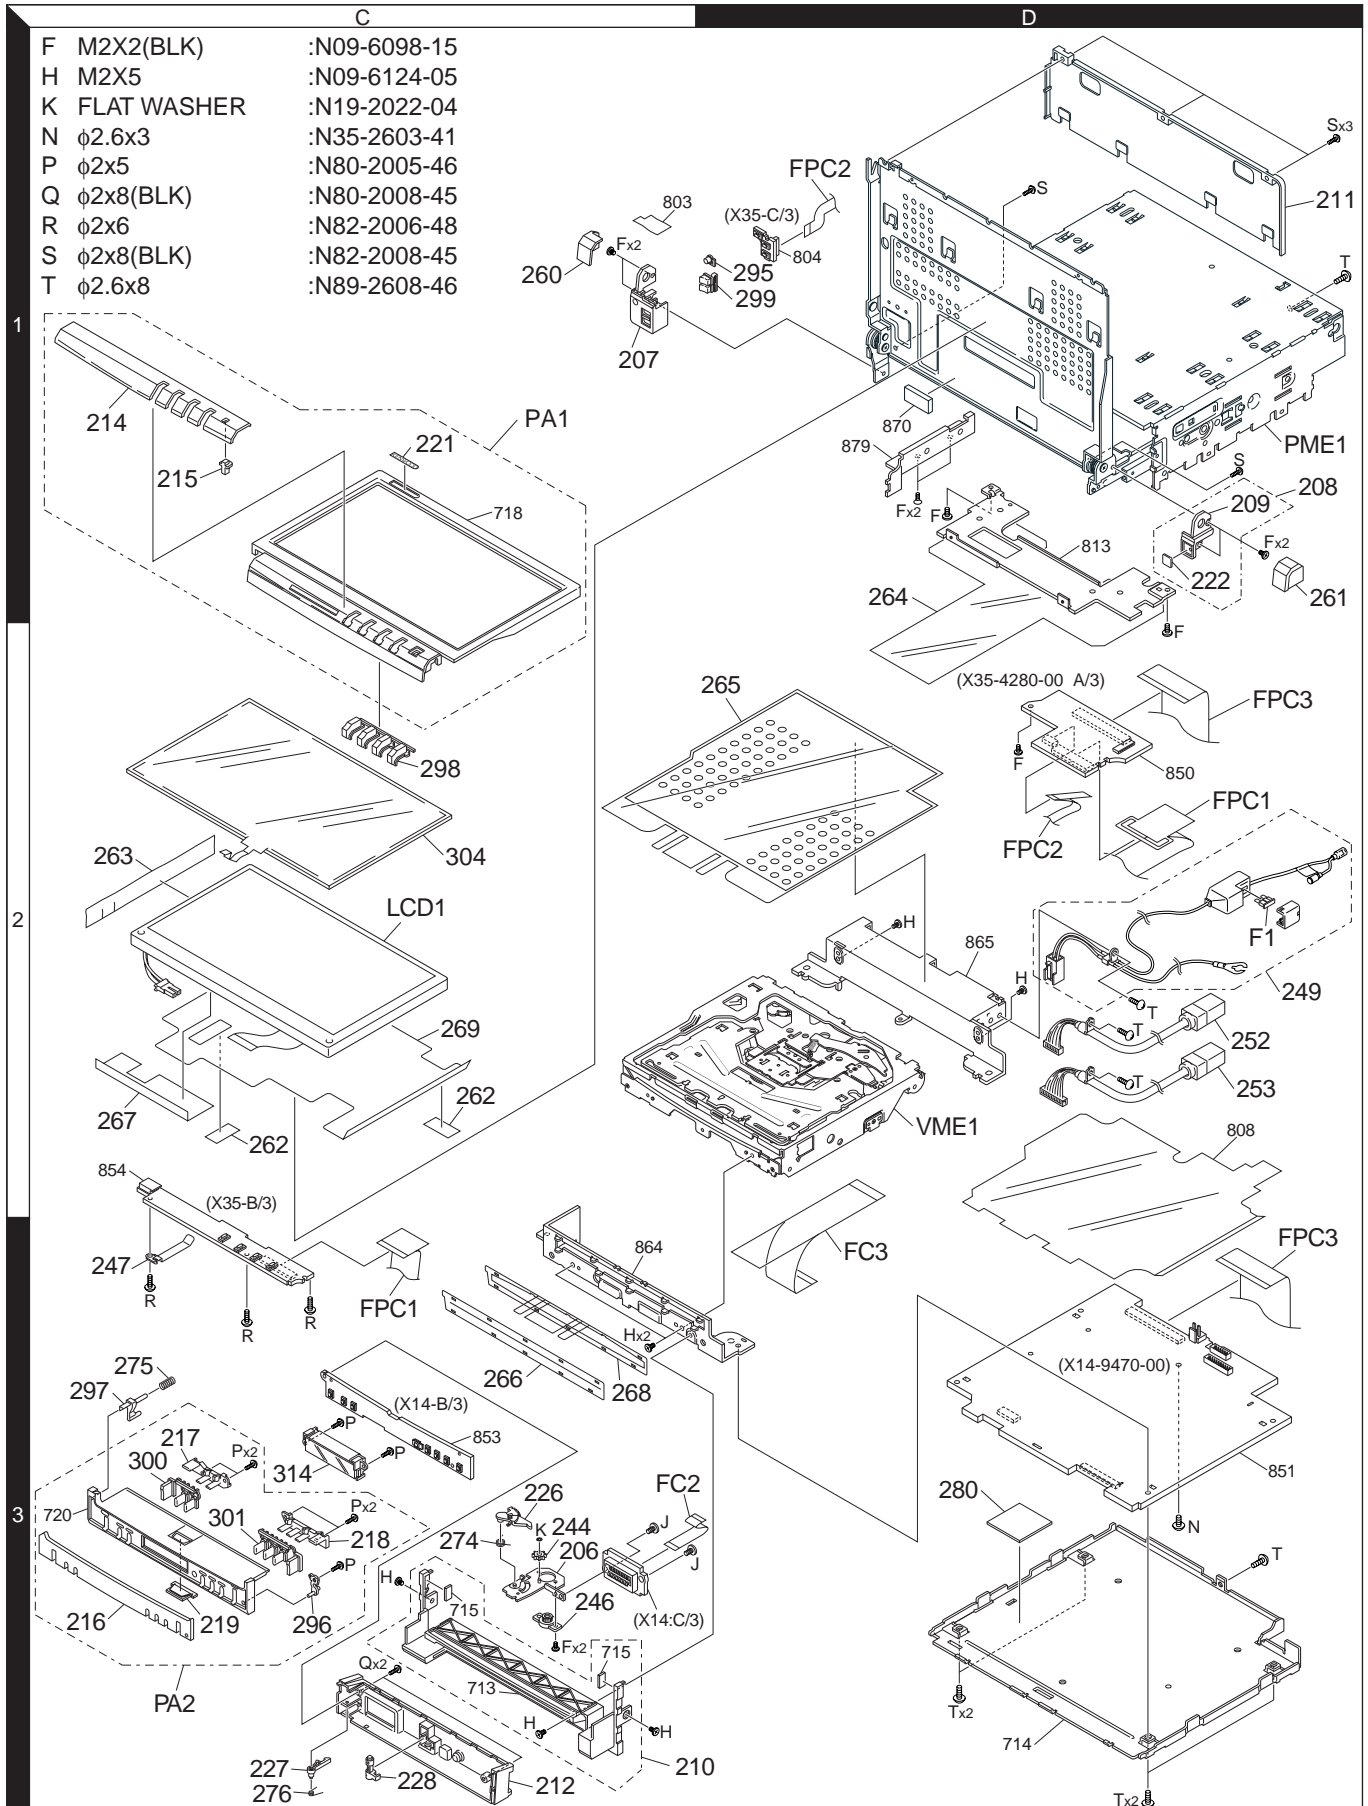


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL MECHANISM)

- | | | |
|---|----------------|--------------|
| A | STEPPED SCREW | :N09-6062-05 |
| B | M2X2.2(BLK) | :N09-6063-05 |
| C | M2X3.5(BLK) | :N09-6064-05 |
| D | M1.7X2.5 | :N09-6065-05 |
| E | STEPPED SCREW | :N09-6066-05 |
| G | M1.7X2.2 | :N09-6111-05 |
| L | WASHER | :N19-2127-14 |
| M | RETAINING RING | :N29-0206-04 |

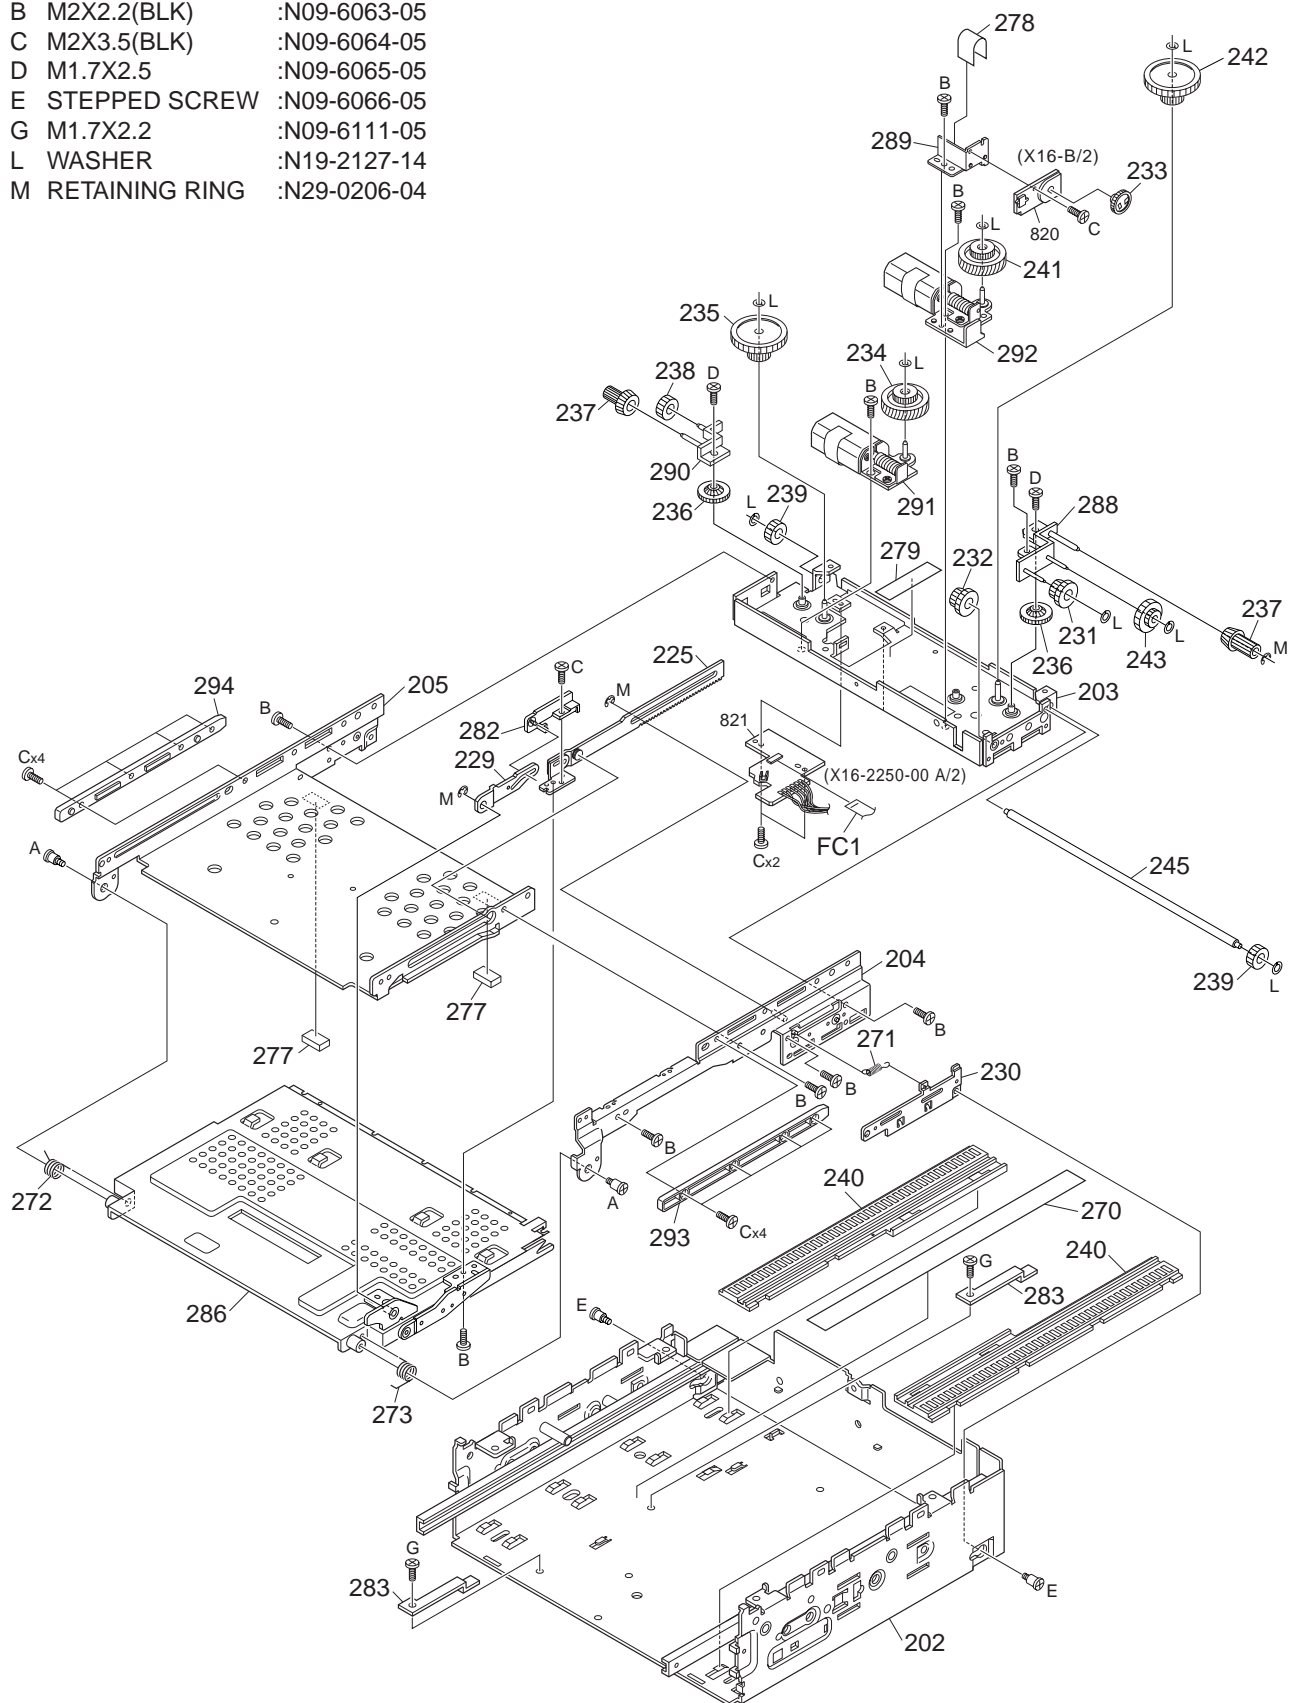

EXPLODED VIEW (AMP UNIT / ACCESSORY)

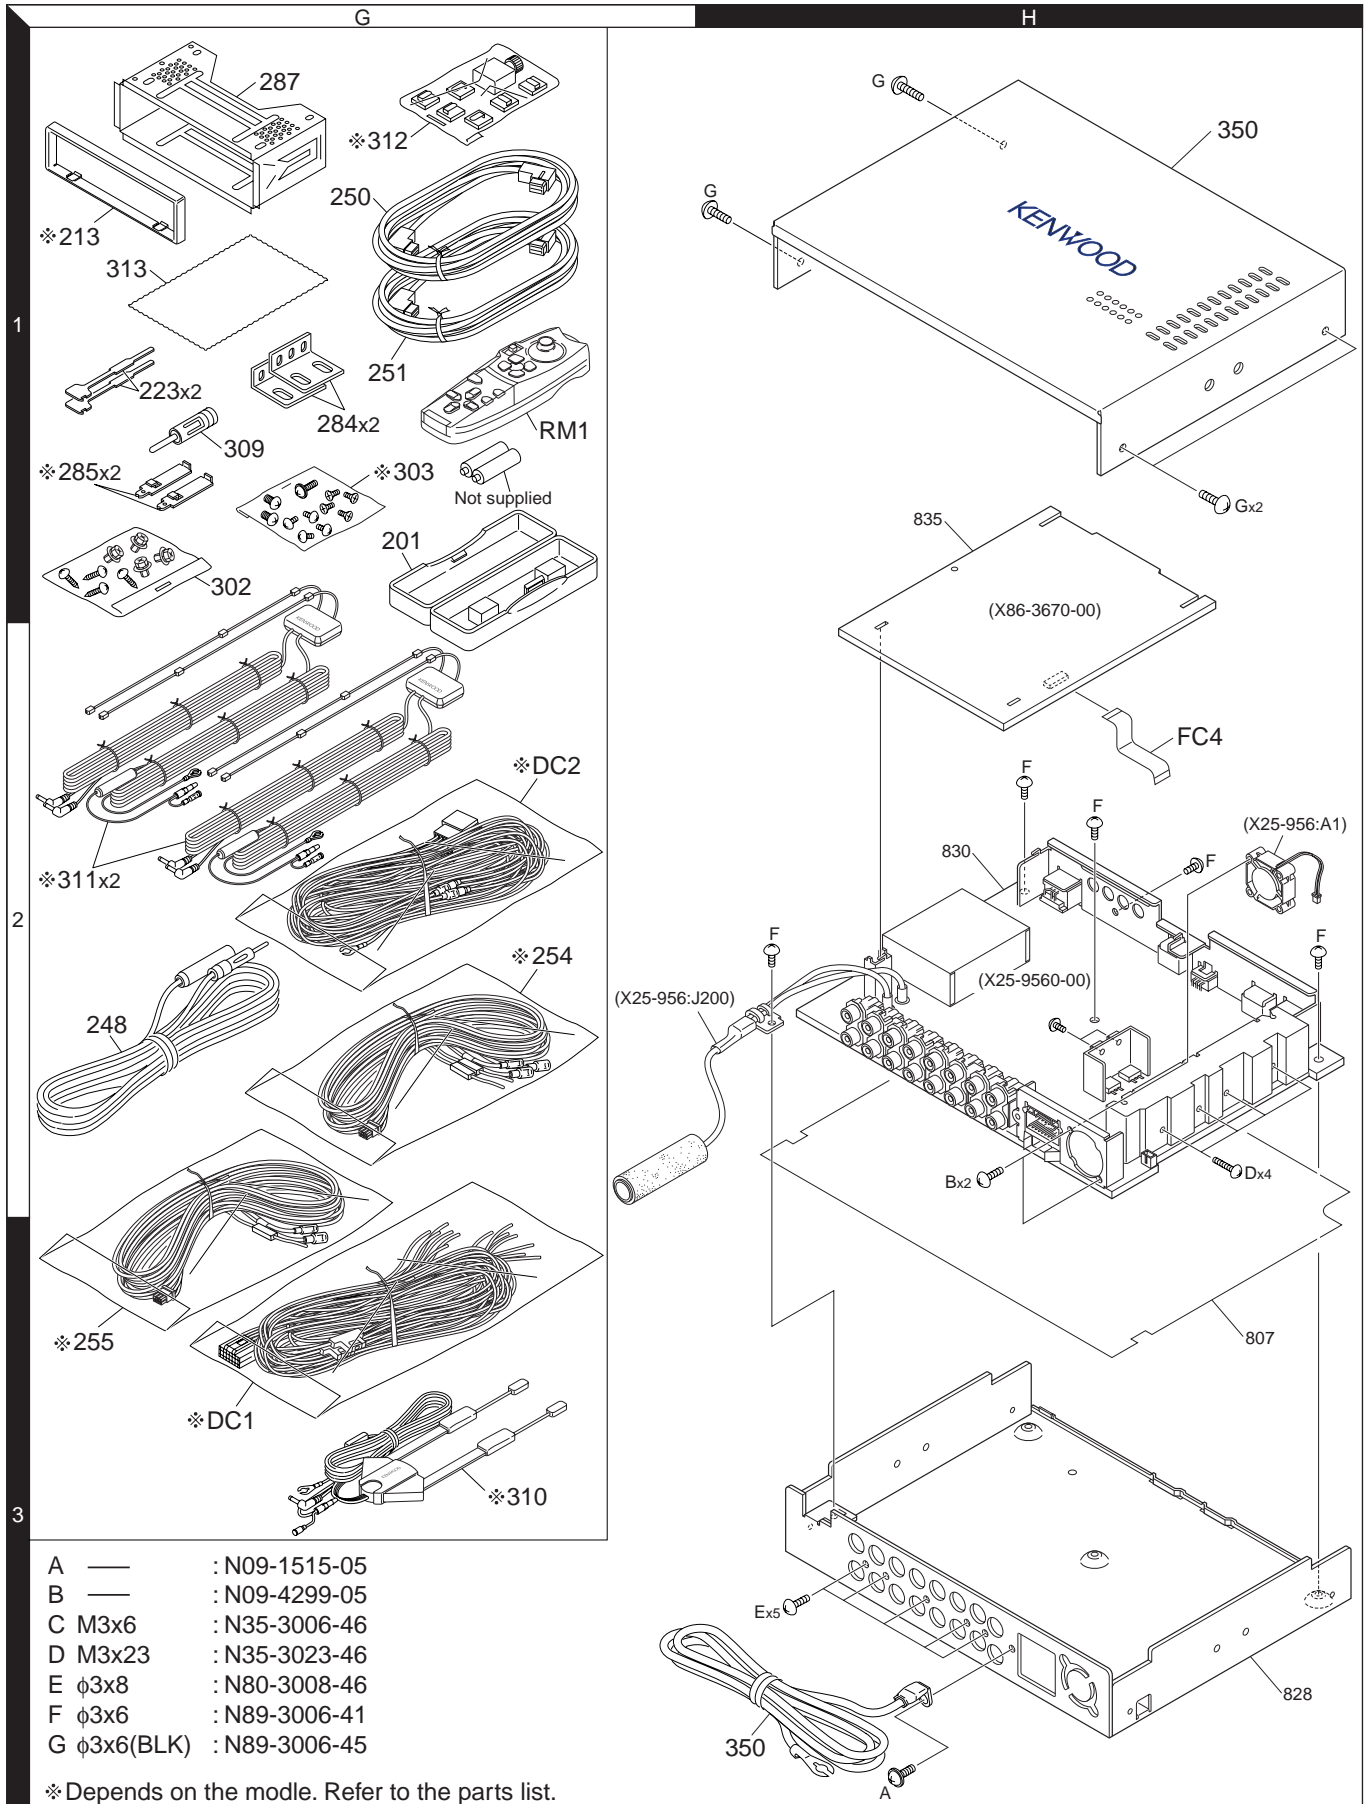

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KVT-915DVD,925DVD,935DVD,945DVD,965DVD					
201	1G		A02-2723-03	PLASTIC CABINET ASSY	
202	3F	*	A10-5009-22	CHASSIS CALKING ASSY	
203	2F		A10-5013-03	CHASSIS CALKING ASSY	
204	2F		A10-5015-13	CHASSIS CALKING ASSY	
205	2E		A10-5018-12	CHASSIS	
206	3C		A11-1622-04	SUB CHASSIS CALKING ASSY	
207	1C	*	A21-4273-12	DRESSING PANEL	K1R1E1
207	1C	*	A21-4274-12	DRESSING PANEL	M1H1X1
207	1C	*	A21-4274-12	DRESSING PANEL	C1
207	1C	*	A21-4275-12	DRESSING PANEL	W1
208	1D	*	A21-4276-14	DRESSING PANEL ASSY	K1R1E1
208	1D	*	A21-4277-14	DRESSING PANEL ASSY	M1H1X1
208	1D	*	A21-4277-14	DRESSING PANEL ASSY	C1
208	1D	*	A21-4278-14	DRESSING PANEL ASSY	W1
209	1D	*	A21-4279-13	DRESSING PANEL	K1R1E1
209	1D	*	A21-4280-13	DRESSING PANEL	M1H1X1
209	1D	*	A21-4280-13	DRESSING PANEL	C1
209	1D	*	A21-4281-13	DRESSING PANEL	W1
210	3C	*	A22-3003-22	SUB PANEL ASSY	K1R1E1
210	3C	*	A22-3004-22	SUB PANEL ASSY	M1H1X1
210	3C	*	A22-3004-22	SUB PANEL ASSY	C1
210	3C	*	A22-3005-22	SUB PANEL ASSY	W1
211	1D		A46-1776-02	REAR COVER	
212	3C	*	A46-1785-11	REAR COVER	
PA1	1C	*	A64-3065-21	PANEL ASSY	K1
PA1	1C	*	A64-3066-11	PANEL ASSY	M1
PA1	1C	*	A64-3067-11	PANEL ASSY	C1
PA1	1C	*	A64-3068-11	PANEL ASSY	H1
PA1	1C	*	A64-3069-11	PANEL ASSY	X1
PA1	1C	*	A64-3070-11	PANEL ASSY	E1
PA1	1C	*	A64-3071-11	PANEL ASSY	W1
PA2	3C	*	A64-3081-12	PANEL ASSY	K1R1
PA2	3C	*	A64-3082-12	PANEL ASSY	M1
PA2	3C	*	A64-3083-12	PANEL ASSY	H1X1C1
PA2	3C	*	A64-3084-12	PANEL ASSY	E1
PA2	3C	*	A64-3091-11	PANEL ASSY	R1
PA2	3C	*	A64-3093-12	PANEL ASSY	W1
PME1	1D	*	A10-5008-31	CHASSIS ASSY	
RM1	1G	*	A70-2046-05	REMOTE CONTROLLER (RC-DV101)	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	K1R1M1
-			B46-0606-04	ID CARD	H1X1C1
-			B46-0612-14	ID CARD	E1W1
-			B46-0648-13	USER CARD	K1
-		*	B58-1370-04	CAUTION CARD	
-		*	B58-1411-04	CAUTION CARD	E1W1
-		*	B64-2602-00	INST. MANUAL (ENG,FRE,SPA,PUR)	K1R1
-		*	B64-2603-00	INST. MANUAL (ENG,KOR,T-CHI,S-CHI)	M1H1X1
-		*	B64-2603-00	INST. MANUAL (ENG,KOR,T-CHI,S-CHI)	C1
-		*	B64-2604-00	INST. MANUAL (ENG,FRE,GER)	E1W1
-		*	B64-2621-00	INST. MANUAL (DUT,ITA,SPA,POR)	E1W1
213	2G		B07-3022-02	ESCUTCHEON	M1H1X1
213	2G		B07-3022-02	ESCUTCHEON	C1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
213	2G		B07-3058-02	ESCUTCHEON	W1
213	2G		B07-3083-02	ESCUTCHEON	K1R1E1
214	1C	*	B07-3085-02	ESCUTCHEON	K1R1
214	1C	*	B07-3086-02	ESCUTCHEON	E1M1H1
214	1C	*	B07-3086-02	ESCUTCHEON	X1C1
214	1C	*	B07-3087-02	ESCUTCHEON	W1
215	1C	*	B10-4404-04	FRONT GLASS	
216	3C	*	B10-4405-12	FRONT GLASS	M1
216	3C	*	B10-4406-12	FRONT GLASS	K1R1H1
216	3C	*	B10-4406-12	FRONT GLASS	X1C1
216	3C	*	B10-4407-12	FRONT GLASS	E1W1
217	3C	*	B19-2217-13	LIGHTING BOARD	
218	3C	*	B19-2218-13	LIGHTING BOARD	
219	3C	*	B19-2219-04	LIGHTING BOARD	
221	1C	*	B43-1508-04	KENWOOD BADGE	K1R1E1
221	1C	*	B43-1508-04	KENWOOD BADGE	W1
221	1C	*	B43-1511-04	KENWOOD BADGE	M1H1X1
221	1C	*	B43-1511-04	KENWOOD BADGE	C1
222	1C	*	B43-1509-14	BADGE (DVD)	K1R1E1
222	1C	*	B43-1509-14	BADGE (DVD)	M1H1X1
222	1C	*	B43-1509-14	BADGE (DVD)	C1
222	1C	*	B43-1510-14	BADGE (DVD)	W1
LCD1	2C		B38-1122-15	LIQUID CRYSTAL	
223	1G		D10-4589-04	LEVER	
225	2F		D10-4703-13	ARM ASSY	
226	3C		D10-4727-03	ARM	
227	3C		D10-4728-04	ARM	
228	3C		D10-4729-04	LEVER	
229	2E		D10-4733-13	ARM	
230	2F		D10-4761-04	LEVER ASSY	
231	2F		D13-2251-04	GEAR	
232	2F		D13-2252-04	GEAR	
233	1F		D13-2253-04	GEAR	
234	1F		D13-2256-04	GEAR	
235	1F		D13-2257-04	GEAR	
236	1F		D13-2258-14	GEAR	
237	1E		D13-2259-14	GEAR	
238	1F		D13-2260-04	GEAR	
239	1F		D13-2261-04	GEAR	
240	3F		D13-2262-13	RACK (GEAR)	
241	1F		D13-2263-04	GEAR	
242	1F		D13-2264-04	GEAR	
243	2F		D13-2265-04	GEAR	
244	3C		D13-2280-04	GEAR	
245	2F		D21-2416-13	SHAFT	
246	3C		D39-0239-05	DAMPER	
247	3C	*	E29-1924-04	LEAD PLATE	
248	1G		E30-4953-05	CORD WITH PLUG	
249	2B	*	E30-6164-05	DC CORD	
250	1G	*	E30-6171-05	CORD WITH CONNECTOR (Black)	
251	2G	*	E30-6172-05	CORD WITH CONNECTOR (White)	
252	2B	*	E30-6173-05	CORD WITH CONNECTOR (Black)	
253	2B	*	E30-6174-05	CORD WITH CONNECTOR (White)	
254	1G	*	E30-6197-25	CORD WITH CONNECTOR	E1W1

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KVT-915DVD,925DVD,935DVD,945DVD,965DVD

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
255	1G	*	E30-6241-25	CORD WITH CONNECTOR	K1R1M1	282	2E		J19-5207-13	HOLDER	
255	1G	*	E30-6241-25	CORD WITH CONNECTOR	H1X1C1	283	3E		J19-5235-04	HOLDER	
△ DC1	1G	*	E30-6195-05	DC CORD	K1R1M1	284	1G		J21-3801-04	MOUNTING HARDWARE	
△ DC1	1G	*	E30-6195-05	DC CORD	H1X1C1	285	1G		J21-9784-04	MOUNTING HARDWARE	K1R1M1
△ DC2	1G	*	E30-6196-15	DC CORD	E1W1	285	1G		J21-9784-04	MOUNTING HARDWARE	H1X1C1
FC1	2F		E39-0537-15	FLAT CABLE (9PIN)		286	3E		J21-9916-12	MOUNTING HARDWARE ASSY	
FC2	3C	*	E39-0549-15	FLAT CABLE (22PIN)		287	1G		J21-9934-03	MOUNTING HARDWARE ASSY	
FC3	3D	*	E39-0550-05	FLAT CABLE		288	1F		J21-9947-04	MOUNTING HARDWARE ASSY	
260	1C	*	F07-1124-03	COVER	K1R1E1	289	1F		J21-9949-04	MOUNTING HARDWARE	
260	1C	*	F07-1124-03	COVER	M1H1X1	290	1F		J21-9984-04	MOUNTING HARDWARE ASSY	
260	1C	*	F07-1124-03	COVER	C1	291	1F		J21-9986-03	MOUNTING HARDWARE ASSY	
260	1C	*	F07-1125-03	COVER	W1	292	1F		J21-9987-03	MOUNTING HARDWARE ASSY	
261	1D	*	F07-1126-03	COVER	K1R1E1	293	3F		J90-1053-03	GUIDE	
261	1D	*	F07-1126-03	COVER		294	2E		J90-1064-03	GUIDE	
261	1D	*	F07-1126-03	COVER	M1H1X1	FPC1	2D		J84-0150-05	FPC (50PIN)	
261	1D	*	F07-1126-03	COVER	C1						
261	1D	*	F07-1127-03	COVER	W1	FPC2	2D		J84-0151-05	FPC (10PIN)	
262	2C		F09-1260-04	SHEET		FPC3	2D	*	J84-0158-15	FPC	
263	2C		F09-1802-04	SHEET							
264	1D	*	F09-1832-24	SHEET		295	1D	*	K24-4057-14	KNOB (OPEN)	K1R1E1
265	2D	*	F09-1833-33	SHEET		295	1D	*	K24-4057-14	KNOB (OPEN)	M1H1X1
266	3C	*	F09-1873-04	SHEET		295	1D	*	K24-4057-14	KNOB (OPEN)	C1
267	2C		F12-0775-04	SHIELDING SHEET		295	1D	*	K24-4058-04	KNOB (OPEN)	W1
268	3C	*	F19-1408-23	BLIND PLATE		296	3C	*	K24-4059-04	KNOB (POWER)	K1R1E1
269	2C		F20-2235-14	INSULATING SHEET		296	3C	*	K24-4060-04	KNOB (POWER)	M1H1X1
270	3F		F20-2240-04	INSULATING SHEET		296	3C	*	K24-4060-04	KNOB (POWER)	C1
271	2F		G01-3152-04	EXTENSION SPRING		296	3C	*	K24-4061-04	KNOB (POWER)	W1
272	3E		G01-3153-04	TORSION COIL SPRING		297	3C	*	K24-4062-04	KNOB (REREASE)	K1R1E1
273	3E		G01-3161-04	TORSION COIL SPRING		297	3C	*	K24-4063-04	KNOB (REREASE)	M1H1X1
274	3C		G01-3168-04	TORSION COIL SPRING		298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	C1
275	3C		G01-3169-14	COMPRESSION SPRING		298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	W1
276	3C		G01-3170-04	TORSION COIL SPRING		298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	C1
277	2E		G11-3512-04	CUSHION		298	2C	*	K25-1552-13	KNOB (SCREEN/MODE/V SEL/FNC.)	W1
278	1F		G16-1452-04	SHEET		299	1D	*	K25-1553-14	KNOB (VOL.)	K1R1E1
279	2F		G16-1453-04	SHEET		299	1D	*	K25-1553-14	KNOB (VOL.)	M1H1X1
280	3D	*	G16-1465-24	SHEET		299	1D	*	K25-1553-14	KNOB (VOL.)	C1
-			H02-0832-03	INNER CARTON CASE		299	1D	*	K25-1554-04	KNOB (VOL.)	W1
-		*	H12-2724-03	PACKING FIXTURE		300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	K1R1E1
-		*	H12-2725-14	PACKING FIXTURE		300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	M1H1X1
-			H13-2004-04	CARTON BOARD		300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	C1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)		300	3C	*	K25-1556-13	KNOB (EJECT/ATT/DISP)	W1
-			H25-0338-04	PROTECTION BAG (250X350X0.03)		301	3C	*	K25-1557-13	KNOB (SKIP/TI)	K1R1E1
-			H25-1115-04	PROTECTION BAG	E1						
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	K1R1W1	301	3C	*	K25-1557-13	KNOB (SKIP/TI)	M1H1X1
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	M1H1X1	301	3C	*	K25-1557-13	KNOB (SKIP/TI)	C1
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	C1	301	3C	*	K25-1558-13	KNOB (SKIP/TI)	W1
-		*	H54-2896-23	ITEM CARTON CASE	K1	302	1G		N99-1558-05	SCREW SET	
-		*	H54-2897-23	ITEM CARTON CASE	E1	303	1G		N99-1723-05	SCREW SET	
-		*	H54-2898-23	ITEM CARTON CASE	M1	303	1G		N99-1723-05	SCREW SET	
-		*	H54-2899-23	ITEM CARTON CASE	X1	A	2E		N09-6062-05	STEPPED SCREW	
-		*	H54-2900-23	ITEM CARTON CASE	C1	B	3E		N09-6063-05	MACHINE SCREW (M2X2.2)	
-		*	H54-2901-23	ITEM CARTON CASE	R1	C	3F		N09-6064-05	MACHINE SCREW (M2X3.5)	
-		*	H54-3180-03	ITEM CARTON CASE	W1	D	1F		N09-6065-05	MACHINE SCREW (M1.7X2.5)	
-		*	H54-3181-03	ITEM CARTON CASE	H1	E	3F		N09-6066-05	STEPPED SCREW	
						F	3C		N09-6098-15	MACHINE SCREW	

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

KVT-915DVD,925DVD,935DVD,945DVD,965DVD

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
G H J K L	3F 2D 3C 3C 2F	*	N09-6111-05 N09-6124-05 N09-6125-05 N19-2022-04 N19-2127-14	MACHINE SCREW MACHINE SCREW (M2.6X3) TAPTITE SCREW (P2X4) FLAT WASHER FLAT WASHER	
M N P Q R	2F 3D 3C 3C 3C	*	N29-0206-04 N35-2603-41 N80-2005-46 N80-2008-45 N82-2006-48	RETAINING RING BINDING HEAD MACHINE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
S T	1D 2D		N82-2008-45 N89-2608-46	BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
304	1C	*	S79-0845-05	SWITCH ASSY	
309	1G		T90-0512-05	ANTENNA ADAPTOR	E1W1
310	3G	*	T90-0545-05	ANTENNA ASSY	M1H1X1
310	3G	*	T90-0545-05	ANTENNA ASSY	C1
311	3G	*	T90-0551-15	ANTENNA ASSY	K1R1E1
311	3G	*	T90-0551-15	ANTENNA ASSY	W1
312	2G	*	W01-1552-05	ACCESSORY	M1H1X1
312	2G	*	W01-1552-05	ACCESSORY	C1
313	2G	*	W01-1620-05	CLEANING CLOTH	
314	3C	*	W02-3401-05	ELEC. CIRCUIT MODULE (DISPLAY)	
VME1	2D		X92-5020-00	MECHANISM ASSY (DVS-3040)	
VIDEO CONTROL UNIT (X14-947x-xx)					
D301 D304 D305			B30-1658-05 B30-1462-05 B30-1523-05	LED (RED,S) LED LED	
C100 C101 C102-104 C105,106 C107-118		*	C94-0224-05 CK73GB1H562K CK73GB1A224K CK73GB1H472K CK73GB1H104K	ELECTRO 2200UF 16WV CHIP C 5600PF K CHIP C 0.22UF K CHIP C 4700PF K CHIP C 0.10UF K	
C119,120 C121 C122 C123 C124			CK73GB1H472K CK73GB1C104K C92-0667-05 C92-1775-05 CK73GB1H104K	CHIP C 4700PF K CHIP C 0.10UF K ELECTRO 10UF 10WV CHIP-TAN 10UF 6.3WV CHIP C 0.10UF K	
C125,126 C127,128 C129 C130 C131		*	CE32AU1A560M CE32AU0G331M CE32AU1C390M CK73DF1C106Z CC73GCH1H391J	CHIP EL 56UF 10WV CHIP EL 330UF 4.0WV CHIP EL 39UF 16WV CHIP C 10UF Z CHIP C 390PF J	
C132,133 C134 C135,136 C137,138 C139,140		*	C92-1766-05 C92-1610-05 CK73GB1H103K C93-1210-05 CK73GB1C104K	ELECTRO 22UF 12.5WV ELECTRO 220UF 16WV CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K	
C141-144 C145-147 C148 C149 C150			C93-1210-05 CK73GB1C104K CK73GB1H103K CK73FB1C105K CK73GB1C104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.10UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C151-153 C154 C155 C156 C157-159			CK73GB1H471K CK73GB1H272K C92-1428-05 CK73GB1C104K CK73GB1H104K	CHIP C 470PF K CHIP C 2700PF K ELECTRO 330UF 6.3WV CHIP C 0.10UF K CHIP C 0.10UF K	
C160 C200,201 C202 C203 C204			CK73GB1H103K CK73GB1H103K CC73GCH1H220J CC73GCH1H080D C92-1359-05	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 22PF J CHIP C 8.0PF D CHIP-TAN 10UF 16WV	
C205-210 C211 C212-214 C215 C216			CK73GB1H103K CK73FB1C105K CK73GB1H103K CC73GCH1H220J CK73GB1A224K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 22PF J CHIP C 0.22UF K	
C217,218 C219 C220 C221,222 C223			CK73FB1C105K CK73GB1H103K CK73GB1C104K CC73GCH1H101J CK73GB1H103K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.010UF K	
C224,225 C226-228 C300 C301 C302-317			CK73GB1C104K CK73GB1H103K CK73GB1H221K CK73FB1A225K CC73GCH1H101J	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 220PF K CHIP C 2.2UF K CHIP C 100PF J	
C322 C351-354 C355,356 C400 C401-403			CC73GCH1H101J CC73GCH1H101J CK73GB0J105K C92-1359-05 CK73GB1H103K	CHIP C 100PF J CHIP C 100PF J CHIP C 1.0UF K CHIP-TAN 10UF 16WV CHIP C 0.010UF K	
C404 C405 C406 C407 C408,409			CK73GB1C104K CK73FB1C105K CK73DF1C106Z CK73GB1H103K CK73FB1C105K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 10UF Z CHIP C 0.010UF K CHIP C 1.0UF K	
C410 C411 C412-414 C415 C416,417			CK73EB1A475K CC73GCH1H331J CK73GB1C104K CK73EB1A475K CK73GB1H103K	CHIP C 4.7UF K CHIP C 330PF J CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.010UF K	
C418 C419-422 C423 C424 C425,426			CK73DF1E106Z CK73GB1H103K CK73GB1H102K CK73GB1H103K CK73GB1C683K	CHIP C 10UF Z CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.068UF K	
C427,428 C429 C430 C431 C432			CK73GB1H103K CK73DF1C106Z CK73GB1C683K CK73GB1C104K CK73GB1H104K	CHIP C 0.010UF K CHIP C 10UF Z CHIP C 0.068UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C500-502 C503 C504 C505,506 C507			CK73GB1C104K CK73GB1A334K CK73GB1C104K CK73FB1C105K CK73GB1A334K	CHIP C 0.10UF K CHIP C 0.33UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.33UF K	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C508			CK73GB1C104K	CHIP C 0.10UF K		C704-723			CK73GB1C104K	CHIP C 0.10UF K	
C509			CC73GCH1H681J	CHIP C 680PF J		C724			C92-0628-05	CHIP-TAN 10UF 10WV	
C510			CC73GCH1H101J	CHIP C 100PF J		C725,726			CK73GB1C104K	CHIP C 0.10UF K	
C511			CK73GB1C683K	CHIP C 0.068UF K		C727			C92-0628-05	CHIP-TAN 10UF 10WV	
C512,513			CK73FB1C105K	CHIP C 1.0UF K		C728			C92-0633-05	CHIP-TAN 22UF 10WV	
C514-516			CK73GB1C104K	CHIP C 0.10UF K		C729-738			CK73GB1C104K	CHIP C 0.10UF K	
C517			C92-0628-05	CHIP-TAN 10UF 10WV		C739			C92-1326-05	CHIP-TAN 47UF 10WV	
C518,519			CK73GB1C104K	CHIP C 0.10UF K		C740			CC73GCH1H150J	CHIP C 15PF J	
C520			C92-0628-05	CHIP-TAN 10UF 10WV		C741			CK73GB0J105K	CHIP C 1.0UF K	
C521-534			CK73GB1C104K	CHIP C 0.10UF K		C742			CK73GB1C104K	CHIP C 0.10UF K	
C535			C92-1359-05	CHIP-TAN 10UF 16WV		C743			C92-1485-05	CHIP C 22UF 6.3WV	
C536,537			CK73GB1C104K	CHIP C 0.10UF K		C744-749			CK73GB1C104K	CHIP C 0.10UF K	
C538			C92-1359-05	CHIP-TAN 10UF 16WV		C750			C92-0628-05	CHIP-TAN 10UF 10WV	
C539,540			CK73GB1C104K	CHIP C 0.10UF K		C751-757			CK73GB1C104K	CHIP C 0.10UF K	
C541,542			CC73GCH1H471J	CHIP C 470PF J		C761			CC73GCH1H150J	CHIP C 15PF J	
C543-556			CK73GB1C104K	CHIP C 0.10UF K		C765			C92-0676-05	ELECTRO 10UF 25WV	
C557			C92-1359-05	CHIP-TAN 10UF 16WV		C766			CK73EB1A475K	CHIP C 4.7UF K	
C558			CK73GB1C104K	CHIP C 0.10UF K		C767			CC73GCH1H040C	CHIP C 4.0PF C	
C559			CC73GCH1H331J	CHIP C 330PF J		C768			CK73GB1C104K	CHIP C 0.10UF K	
C560			CC73GCH1H101J	CHIP C 100PF J		C770			CC73GCH1H050C	CHIP C 5.0PF C	
C561			CK73GB1C104K	CHIP C 0.10UF K		C771			C92-0628-05	CHIP-TAN 10UF 10WV	
C562			CK73FB1C105K	CHIP C 1.0UF K		C772			CK73GB1C104K	CHIP C 0.10UF K	
C564			CK73GB1C104K	CHIP C 0.10UF K		C774			C92-0093-05	CHIP C 100UF 6.3WV	
C567,568			CK73GB1C104K	CHIP C 0.10UF K		C775			CK73GB1C104K	CHIP C 0.10UF K	
C569			CK73FB1C105K	CHIP C 1.0UF K		C777			CK73GB1H103K	CHIP C 0.010UF K	
C570			CK73GB1H153K	CHIP C 0.015UF K		C778			CK73GB1C104K	CHIP C 0.10UF K	
C571			CK73EB1A475K	CHIP C 4.7UF K		C779			C92-1359-05	CHIP-TAN 10UF 16WV	
C572			CC73GCH1H151J	CHIP C 150PF J		C780,781			CC73GCH1H100D	CHIP C 10PF D	
C573			CC73GCH1H102J	CHIP C 1000PF J		C782			CC73GCH1H150J	CHIP C 15PF J	
C575			C92-1359-05	CHIP-TAN 10UF 16WV		C783			CK73GB1C104K	CHIP C 0.10UF K	
C576			CK73GB1C104K	CHIP C 0.10UF K		C784			CC73GCH1H150J	CHIP C 15PF J	
C579			CC73GCH1H471J	CHIP C 470PF J		C897			CK73GB1H103K	CHIP C 0.010UF K	
C580-584			CK73GB1C104K	CHIP C 0.10UF K		C899			CK73GB1C104K	CHIP C 0.10UF K	
C586,587			CK73GB1C104K	CHIP C 0.10UF K		C900,901			C92-0628-05	CHIP-TAN 10UF 10WV	
C589			CK73GB1C104K	CHIP C 0.10UF K		C902			CK73GB1C104K	CHIP C 0.10UF K	
C590			C92-1359-05	CHIP-TAN 10UF 16WV		C903			C92-1485-05	CHIP C 22UF 6.3WV	
C591			CK73GB1C104K	CHIP C 0.10UF K		C904			CK73GB1C104K	CHIP C 0.10UF K	
C592			CC73GCH1H471J	CHIP C 470PF J		C905			CK73GB1A224K	CHIP C 0.22UF K	
C593			CK73GB1C104K	CHIP C 0.10UF K		C906-917			CK73GB1C104K	CHIP C 0.10UF K	
C594,595			C92-0628-05	CHIP-TAN 10UF 10WV		C918,919			CK73GB1H103K	CHIP C 0.010UF K	
C596-598			CK73FB1C105K	CHIP C 1.0UF K		C920,921			CK73GB1C104K	CHIP C 0.10UF K	
C599-607			CK73GB1C104K	CHIP C 0.10UF K		C922			CK73GB1H103K	CHIP C 0.010UF K	
C608			C92-0628-05	CHIP-TAN 10UF 10WV		C923-927			CK73GB1C104K	CHIP C 0.10UF K	
C609-618			CK73GB1C104K	CHIP C 0.10UF K		C928,929			CK73FB1C105K	CHIP C 1.0UF K	
C619			C92-0628-05	CHIP-TAN 10UF 10WV		C930,931			C92-1324-05	CHIP-TAN 4.7UF 16WV	
C620-653			CK73GB1C104K	CHIP C 0.10UF K		C932			CK73GB1C104K	CHIP C 0.10UF K	
C654-656			C92-0628-05	CHIP-TAN 10UF 10WV		C933			C92-0628-05	CHIP-TAN 10UF 10WV	
C657			CK73GB1C104K	CHIP C 0.10UF K		C934			CK73GB1C104K	CHIP C 0.10UF K	
C658,659			C92-0628-05	CHIP-TAN 10UF 10WV		C935,936			C92-1359-05	CHIP-TAN 10UF 16WV	
C660-667			CK73GB1C104K	CHIP C 0.10UF K		C937-940			CK73GB1C104K	CHIP C 0.10UF K	
C670			C92-0628-05	CHIP-TAN 10UF 10WV		C941,942			CC73GCH1H471J	CHIP C 470PF J	
C671-678			CK73GB1C104K	CHIP C 0.10UF K		C943			C92-1359-05	CHIP-TAN 10UF 16WV	
C700			C92-0628-05	CHIP-TAN 10UF 10WV		C944-947			CK73GB1C104K	CHIP C 0.10UF K	
C701,702			CK73GB1C104K	CHIP C 0.10UF K		C948			C92-1359-05	CHIP-TAN 10UF 16WV	
C703			C92-0628-05	CHIP-TAN 10UF 10WV		C949			C92-0672-05	ELECTRO 22UF 16WV	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C950 C951 C952-954 C955 C956			CK73GB1C104K C92-0672-05 CK73GB1C104K C92-1359-05 CK73GB1C104K	CHIP C 0.10UF K ELECTRO 22UF 16WV CHIP C 0.10UF K CHIP-TAN 10UF 16WV CHIP C 0.10UF K	
C957 C958 C959 C960,961 C962			CK73GB1H332K C92-1359-05 CK73GB1H332K CK73GB1H681K CK73GB1C104K	CHIP C 3300PF K CHIP-TAN 10UF 16WV CHIP C 3300PF K CHIP C 680PF K CHIP C 0.10UF K	
C963,964 C965,966 C967,968 C969-972 C973			CK73GB1H681K CK73GB1H332K CK73GB1C104K CC73GC1H681J CK73GB1C104K	CHIP C 680PF K CHIP C 3300PF K CHIP C 0.10UF K CHIP C 680PF J CHIP C 0.10UF K	
C974 C975 C976 C977 C978			CK73GB1H332K CK73GB1C104K CK73GB1H332K CK73GB1C104K CK73GB1H332K	CHIP C 3300PF K CHIP C 0.10UF K CHIP C 3300PF K CHIP C 0.10UF K CHIP C 3300PF K	
C979 C980 C981,982 C983,984 C985			CK73GB1H152K CK73GB1H332K CK73GB1H681K CK73GB1C104K CK73GB1H681K	CHIP C 1500PF K CHIP C 3300PF K CHIP C 680PF K CHIP C 0.10UF K CHIP C 680PF K	
C986 C987-989 C990-997 C998,999			CK73GB1H152K CK73GB1H681K CK73EB0J106K CK73GB1C104K	CHIP C 1500PF K CHIP C 680PF K CHIP C 10UF K CHIP C 0.10UF K	
CN100 CN200 CN201 CN202 CN203		*	E40-9120-05 E40-9409-05 E41-0390-05 E41-0391-05 E40-5888-05	PIN ASSY PIN ASSY PIN ASSY PIN ASSY FLAT CABLE CONNECTOR	
CN204 CN300 CN301 CN500 CN701		*	E41-0341-05 E41-0395-05 E41-0456-05 E40-5661-05 E40-9409-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR PIN ASSY PIN ASSY	
CN702 J300 J301 P100-104			E41-0333-05 E58-0865-05 E59-0829-05 E23-0746-05	FLAT CABLE CONNECTOR RECTANGULAR RECEPTACLE RECTANGULAR PLUG TERMINAL	
CF100-105 L100 L101,102 L103 L104		*	L72-0780-05 L33-1914-05 L33-1906-05 L33-1933-05 L19-0733-05	CERAMIC FILTER CHOKO COIL CHOKO COIL CHOKO COIL TRANSFORMER FOR CONVERTER	
L105 L106-108 L200 L400 L500		*	L33-1914-05 L40-1001-78 L92-0319-05 L40-1001-78 L92-0381-05	CHOKO COIL SMALL FIXED INDUCTOR (10UH) CHIP FERRITE SMALL FIXED INDUCTOR (10UH) CHIP FERRITE	
L507,508			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L509 L512 L514 L515,516 L519			L92-0319-05 L40-1001-78 L40-1001-78 L92-0319-05 L40-1001-78	CHIP FERRITE SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (10UH) CHIP FERRITE SMALL FIXED INDUCTOR (10UH)	
L700,701 L705 L709 L710-713 L900		*	L92-0373-05 L92-0381-05 L40-1001-78 L92-0381-05 L92-0330-05	CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10UH) CHIP FERRITE CHIP FERRITE	
L901-903 X1 X2 X501 X700		*	L40-1001-78 L78-0596-05 L77-2304-05 L78-0549-05 L77-2866-05	SMALL FIXED INDUCTOR (10UH) RESONATOR CRYSTAL RESONATOR (32.768KHZ) RESONATOR (50KHZ) CRYSTAL RESONATOR (27MHZ)	
CP1-10 CP11,12 CP13-20 CP21-34 CP35-43			R90-1096-05 RK74HB1J220J RK74HB1J470J R90-1096-05 RK74HB1J220J	MULTI-COMP 10K X4 CHIP-COM 22 J 1/16W CHIP-COM 47 J 1/16W MULTI-COMP 10K X4 CHIP-COM 22 J 1/16W	
CP44 CP45-54 CP55-57 CP58-62 CP63,64		*	RK74HB1J470J RK74HB1J680J R90-1096-05 RK74HB1J680J R90-1096-05	CHIP-COM 47 J 1/16W CHIP-COM 68 J 1/16W MULTI-COMP 10K X4 CHIP-COM 68 J 1/16W MULTI-COMP 10K X4	
CP65-71 CP200 CP700,701 CP702-704 CP705,706		*	RK74HB1J470J R90-1096-05 RK74HB1J472J RK74HB1J330J RK74HB1J472J	CHIP-COM 47 J 1/16W MULTI-COMP 10K X4 CHIP-COM 4.7K J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 4.7K J 1/16W	
CP707,708 CP709-713 CP714-717 CP718,719 CP720,721		*	RK74HB1J330J RK74HB1J472J R90-1096-05 RK74HB1J472J RK74HB1J470J	CHIP-COM 33 J 1/16W CHIP-COM 4.7K J 1/16W MULTI-COMP 10K X4 CHIP-COM 4.7K J 1/16W CHIP-COM 47 J 1/16W	
CP722,723 CP724-733 CP734 CP735-742 CP743		*	RK74HB1J330J RK74HB1J680J RK74HB1J472J RK74HB1J220J RK74HB1J101J	CHIP-COM 33 J 1/16W CHIP-COM 68 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 100 J 1/16W	
CP744 CP900 CP901-904 CP905-913 CP914-919			RK74HB1J472J R90-1096-05 RK74HB1J220J R90-1096-05 RK74HB1J220J	CHIP-COM 4.7K J 1/16W MULTI-COMP 10K X4 CHIP-COM 22 J 1/16W MULTI-COMP 10K X4 CHIP-COM 22 J 1/16W	
R100 R101 R102 R103 R104			RK73GB2A681J RK73GB2A363J RK73GB2A513J RK73GB2A363J RK73GB2A473J	CHIP R 680 J 1/10W CHIP R 36K J 1/10W CHIP R 51K J 1/10W CHIP R 36K J 1/10W CHIP R 47K J 1/10W	
R105 R106-108 R109-111 R112 R113			RK73GB2A100J RK73GB2A220J RK73GB2A101J RK73GB2A220J RK73GB2A242J	CHIP R 10 J 1/10W CHIP R 22 J 1/10W CHIP R 100 J 1/10W CHIP R 22 J 1/10W CHIP R 2.4K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R115			RN73GH1J104D	CHIP R 100K D 1/16W		R239			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1W1 M1X1C1
R116			RN73GH1J154D	CHIP R 150K D 1/16W		R240			RK73GB2A103J	CHIP R 10K J 1/10W	
R117		*	RN73GH1J2212D	CHIP R 22.1K D 1/16W		R241			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118			RN73GH1J154D	CHIP R 150K D 1/16W		R242			RK73GB2A104J	CHIP R 100K J 1/10W	
R119		*	RN73GH1J132D	CHIP R 1.3K D 1/16W		R243			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R120		*	RN73GH1J2552D	CHIP R 25.5K D 1/16W		R244			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R121		*	RN73GH1J433D	CHIP R 43K D 1/16W		R245,246			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R172			RK73GB2A223J	CHIP R 22K J 1/10W		R247			RK73GB2A104J	CHIP R 100K J 1/10W	
R173			RK73GB2A103J	CHIP R 10K J 1/10W		R248			RK73GB2A473J	CHIP R 47K J 1/10W	
R174			RK73GB2A432J	CHIP R 4.3K J 1/10W		R249			RK73GB2A104J	CHIP R 100K J 1/10W	
R175			RK73GB2A472J	CHIP R 4.7K J 1/10W		R250			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R177-179			RK73GB2A223J	CHIP R 22K J 1/10W		R251			RK73GB2A104J	CHIP R 100K J 1/10W	
R180			RK73GB2A752J	CHIP R 7.5K J 1/10W		R252			RK73GB2A683J	CHIP R 68K J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W		R253			RK73GB2A104J	CHIP R 100K J 1/10W	
R183			RK73GB2A103J	CHIP R 10K J 1/10W		R254			RK73GB2A683J	CHIP R 68K J 1/10W	
R186			RK73GB2A103J	CHIP R 10K J 1/10W		R255			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R191			RK73GB2A822J	CHIP R 8.2K J 1/10W		R256-262			RK73GB2A104J	CHIP R 100K J 1/10W	
R192-197			RK73GB2A104J	CHIP R 100K J 1/10W		R263			RK73GB2A123J	CHIP R 12K J 1/10W	
R198		*	RN73GH1J4021D	CHIP R 4.02K D 1/16W		R264-267			RK73GB2A104J	CHIP R 100K J 1/10W	
R199			RN73GH1J102D	CHIP R 1.0K D 1/16W		R268			RK73GB2A123J	CHIP R 12K J 1/10W	
R200			RK73GB2A622J	CHIP R 6.2K J 1/10W		R269			RK73GB2A473J	CHIP R 47K J 1/10W	
R201			RN73GH1J102D	CHIP R 1.0K D 1/16W		R270			RK73GB2A104J	CHIP R 100K J 1/10W	
R202			RN73GH1J242D	CHIP R 2.4K D 1/16W		R271			RK73GB2A224J	CHIP R 220K J 1/10W	
R203			RN73GH1J102D	CHIP R 1.0K D 1/16W		R272			RK73GB2A104J	CHIP R 100K J 1/10W	
R204		*	RN73GH1J821D	CHIP R 820 D 1/16W		R273			RK73GB2A103J	CHIP R 10K J 1/10W	
R205,206			RN73GH1J102D	CHIP R 1.0K D 1/16W		R274			RK73GB2A104J	CHIP R 100K J 1/10W	
R207			RN73GH1J752D	CHIP R 7.5K D 1/16W		R275			RK73GB2A684J	CHIP R 680K J 1/10W	
R208			RN73GH1J102D	CHIP R 1.0K D 1/16W		R276-279			RK73GB2A104J	CHIP R 100K J 1/10W	
R209			RK73GB2A622J	CHIP R 6.2K J 1/10W		R280			RK73GB2A101J	CHIP R 100 J 1/10W	
R210			RK73GB2A104J	CHIP R 100K J 1/10W		R281,282			RK73GB2A104J	CHIP R 100K J 1/10W	
R211		*	R92-3416-05	CHIP R 0.27 J 1/2W		R283			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R212			RK73GB2A511J	CHIP R 510 J 1/10W		R284			RK73GB2A473J	CHIP R 47K J 1/10W	
R213			RK73GB2A104J	CHIP R 100K J 1/10W		R285			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R214			RK73EB2E100J	CHIP R 10 J 1/4W		R286			RK73GB2A104J	CHIP R 100K J 1/10W	
R215			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R287			RK73GB2A473J	CHIP R 47K J 1/10W	
R216			RK73EB2E100J	CHIP R 10 J 1/4W		R288-292			RK73GB2A101J	CHIP R 100 J 1/10W	
R217,218			RK73EB2E102J	CHIP R 1.0K J 1/4W		R293,294			RK73GB2A104J	CHIP R 100K J 1/10W	
R219			RK73GB2A104J	CHIP R 100K J 1/10W		R295-299			RK73GB2A101J	CHIP R 100 J 1/10W	
R220-222			RK73GB2A750J	CHIP R 75 J 1/10W		R300			RK73GB2A681J	CHIP R 680 J 1/10W	
R223			RK73GB2A102J	CHIP R 1.0K J 1/10W		R301-303			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R224			RK73GB2A750J	CHIP R 75 J 1/10W		R304-310			RK73EB2E101J	CHIP R 100 J 1/4W	
R225-227			RK73EB2E101J	CHIP R 100 J 1/4W		R311			RK73EB2E391J	CHIP R 390 J 1/4W	
R228			RK73GB2A102J	CHIP R 1.0K J 1/10W		R312			RK73EB2E511J	CHIP R 510 J 1/4W	
R229,230			RK73EB2E101J	CHIP R 100 J 1/4W		R313			RK73GB2A104J	CHIP R 100K J 1/10W	
R231			RK73EB2E102J	CHIP R 1.0K J 1/4W		R314-316			RK73EB2E561J	CHIP R 560 J 1/4W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W		R317			RK73EB2E101J	CHIP R 100 J 1/4W	
R233			RK73EB2E102J	CHIP R 1.0K J 1/4W		R318			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R234			RK73GB2A103J	CHIP R 10K J 1/10W	R1M1H1	R319			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R234			RK73GB2A103J	CHIP R 10K J 1/10W	X1C1	R320			RK73EB2E241J	CHIP R 240 J 1/4W	
R235			RK73GB2A103J	CHIP R 10K J 1/10W	K1E1W1	R321			RK73EB2E361J	CHIP R 360 J 1/4W	
R236			RK73EB2E102J	CHIP R 1.0K J 1/4W		R322			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R237			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1W1	R323			RK73GB2A103J	CHIP R 10K J 1/10W	
R237			RK73GB2A103J	CHIP R 10K J 1/10W	X1C1	R324			RK73EB2E391J	CHIP R 390 J 1/4W	
R238			RK73GB2A103J	CHIP R 10K J 1/10W	M1	R325			RK73EB2E511J	CHIP R 510 J 1/4W	
R238,239			RK73GB2A103J	CHIP R 10K J 1/10W	K1H1	R326			RK73EB2E101J	CHIP R 100 J 1/4W	

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R327,328 R329 R330-336 R337 R338		*	RK73GB2A271J RK73GB2A223J RK73GB2A101J RK73EB2E911J RK73EB2E621J	CHIP R 270 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 910 J 1/4W CHIP R 620 J 1/4W	
R339 R340 R341-343 R344-347 R348,349			RK73GB2A104J RK73GB2A473J RK73EB2E100J RK73EB2E102J RK73EB2E101J	CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 10 J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W	
R350 R351 R353 R403 R404			RK73EB2E102J RK73GB2A103J RK73GB2A103J RK73GB2A303J RK73GB2A103J	CHIP R 1.0K J 1/4W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 30K J 1/10W CHIP R 10K J 1/10W	
R405 R407 R408 R409 R410			RK73GB2A123J RK73GB2A433J RK73GB2A222J RK73GB2A103J RK73GB2A271J	CHIP R 12K J 1/10W CHIP R 43K J 1/10W CHIP R 2.2K J 1/10W CHIP R 10K J 1/10W CHIP R 270 J 1/10W	
R411 R412 R413 R414 R415-418			RK73GB2A102J RK73GB2A101J RK73GB2A473J RK73GB2A123J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 12K J 1/10W CHIP R 10K J 1/10W	
R419 R420 R421 R422 R423			RK73GB2A201J RK73GB2A123J RK73GB2A243J RK73GB2A153J RK73GB2A273J	CHIP R 200 J 1/10W CHIP R 12K J 1/10W CHIP R 24K J 1/10W CHIP R 15K J 1/10W CHIP R 27K J 1/10W	
R424,425 R426,427 R428,429 R430 R431			RK73GB2A822J RK73GB2A101J RK73GB2A103J RK73GB2A303J RK73GB2A622J	CHIP R 8.2K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 30K J 1/10W CHIP R 6.2K J 1/10W	
R432,433 R434 R435,436 R500 R501,502		*	RK73GB2A103J RK73GB2A101J RK73GB2A222J RK73GB2A103J RN73GH1J302D	CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 2.2K J 1/10W CHIP R 10K J 1/10W CHIP R 3.0K D 1/16W	
R503 R504 R505 R506,507 R508			RK73GB2A220J RK73GB2A101J RK73GB2A104J RK73GB2A330J RK73GB2A472J	CHIP R 22 J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 33 J 1/10W CHIP R 4.7K J 1/10W	
R509,510 R511 R512 R513 R520			RK73GB2A103J RK73GB2A104J RK73GB2A272J RK73GB2A912J RK73GB2A104J	CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 2.7K J 1/10W CHIP R 9.1K J 1/10W CHIP R 100K J 1/10W	
R529 R537-539 R543 R550,551 R553			RK73GB2A104J RK73GB2A104J RK73GB2A273J RK73GB2A104J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 27K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R559 R561,562 R563 R567 R570			RK73GB2A104J RK73GB2A220J RK73GB2A104J RK73GB2A331J RK73GB2A914J	CHIP R 100K J 1/10W CHIP R 22 J 1/10W CHIP R 100K J 1/10W CHIP R 330 J 1/10W CHIP R 910K J 1/10W	
R572 R577 R578 R579 R580		*	RK73GB2A103J RN73GH1J302D RN73GH1J182D RN73GH1J391D RK73GB2A473J	CHIP R 10K J 1/10W CHIP R 3.0K D 1/16W CHIP R 1.8K D 1/16W CHIP R 390 D 1/16W CHIP R 47K J 1/10W	
R582 R584,585 R586 R590 R592			RK73GB2A912J RK73GB2A220J RK73GB2A272J RN73GH1J222D RN73GH1J332D	CHIP R 9.1K J 1/10W CHIP R 22 J 1/10W CHIP R 2.7K J 1/10W CHIP R 2.2K D 1/16W CHIP R 3.3K D 1/16W	
R593,594 R597,598 R599,600 R601 R602		*	RN73GH1J222D RN73GH1J101D RK73GB2A104J RN73GH1J101D RN73GH1J562D	CHIP R 2.2K D 1/16W CHIP R 100 D 1/16W CHIP R 100K J 1/10W CHIP R 100 D 1/16W CHIP R 5.6K D 1/16W	
R603-609 R610-612 R613,614 R615-617 R618			RK73GB2A104J RK73GB2A330J RK73GB2A104J RN73GH1J562D RK73GB2A330J	CHIP R 100K J 1/10W CHIP R 33 J 1/10W CHIP R 100K J 1/10W CHIP R 5.6K D 1/16W CHIP R 33 J 1/10W	
R623-625 R629 R630 R631 R632,633			RK73GB2A470J RK73GB2A203J RK73GB2A102J RK73GB2A330J RK73GB2A103J	CHIP R 47 J 1/10W CHIP R 20K J 1/10W CHIP R 1.0K J 1/10W CHIP R 33 J 1/10W CHIP R 10K J 1/10W	
R635 R700,701 R702 R703 R704-710			RK73GB2A101J RK73GB2A104J RK73GB2A473J RK73GB2A472J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W	
R711 R712 R713 R714,715 R716			RK73GB2A472J RK73GB2A103J RK73GB2A222J RK73GB2A472J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W	
R717 R718 R719,720 R721 R722,723			RK73GB2A330J RK73GB2A820J RK73GB2A220J RK73GB2A330J RK73GB2A820J	CHIP R 33 J 1/10W CHIP R 82 J 1/10W CHIP R 22 J 1/10W CHIP R 33 J 1/10W CHIP R 82 J 1/10W	
R724 R725 R726-728 R729 R730			RK73GB2A103J RK73GB2A472J RK73GB2A103J RK73GB2A330J RK73GB2A472J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 33 J 1/10W CHIP R 4.7K J 1/10W	
R731 R732 R733 R734 R735,736			RK73GB2A220J RK73GB2A472J RK73GB2A103J RK73GB2A471J RK73GB2A104J	CHIP R 22 J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R737			RK73GB2A182J	CHIP R 1.8K J 1/10W		R987			RK73GB2A103J	CHIP R 10K J 1/10W	
R738			RK73GB2A151J	CHIP R 150 J 1/10W		R989-992			RK73GB2A223J	CHIP R 22K J 1/10W	
R739,740			RK73GB2A472J	CHIP R 4.7K J 1/10W		R993			RK73GB2A470J	CHIP R 47 J 1/10W	
R741,742			RK73GB2A101J	CHIP R 100 J 1/10W		R994,995			RK73GB2A223J	CHIP R 22K J 1/10W	
R743			RK73GB2A103J	CHIP R 10K J 1/10W		R996			RK73GB2A104J	CHIP R 100K J 1/10W	
R744			RK73GB2A472J	CHIP R 4.7K J 1/10W		VR100			R32-0244-05	SEMI FIXED VARIABLE RESISTOR	
R745-747			RK73GB2A151J	CHIP R 150 J 1/10W		VR400			R32-0235-05	SEMI FIXED VARIABLE RESISTOR	
R751			RK73GB2A331J	CHIP R 330 J 1/10W		VR401-403			R32-0245-05	SEMI FIXED VARIABLE RESISTOR	
R754			RK73FB2B221J	CHIP R 220 J 1/8W		VR404			R32-0235-05	SEMI FIXED VARIABLE RESISTOR	
R755			RK73EB2E750J	CHIP R 75 J 1/4W		VR405-409			R32-0245-05	SEMI FIXED VARIABLE RESISTOR	
R756			RK73GB2A472J	CHIP R 4.7K J 1/10W		VR700			R32-0258-05	SEMI FIXED VARIABLE RESISTOR	
R762		*	RN73GH1J123D	CHIP R 12K D 1/16W		W100-110			R92-1252-05	CHIP R 0 OHM J 1/16W	
R763			RN73GH1J152D	CHIP R 1.5K D 1/16W		W114			R92-1252-05	CHIP R 0 OHM J 1/16W	
R764			RN73GH1J243D	CHIP R 24K D 1/16W		W117			R92-1252-05	CHIP R 0 OHM J 1/16W	
R765			RK73GB2A472J	CHIP R 4.7K J 1/10W		W201			R92-1252-05	CHIP R 0 OHM J 1/16W	
R766			RK73GB2A220J	CHIP R 22 J 1/10W		W300			R92-2053-05	CHIP R 0 J 1/8W	
R767-769			RK73GB2A101J	CHIP R 100 J 1/10W		W504,505			R92-1252-05	CHIP R 0 OHM J 1/16W	
R770			RK73GB2A472J	CHIP R 4.7K J 1/10W		W524			R92-1252-05	CHIP R 0 OHM J 1/16W	
R771,772			RK73GB2A101J	CHIP R 100 J 1/10W		W538,539			R92-1252-05	CHIP R 0 OHM J 1/16W	
R900-903			RK73GB2A470J	CHIP R 47 J 1/10W		W543			R92-1252-05	CHIP R 0 OHM J 1/16W	
R904,905			RK73GB2A220J	CHIP R 22 J 1/10W		W551			R92-1252-05	CHIP R 0 OHM J 1/16W	
R906			RK73GB2A103J	CHIP R 10K J 1/10W		W557-561			R92-1252-05	CHIP R 0 OHM J 1/16W	
R907,908			RK73GB2A821J	CHIP R 820 J 1/10W		W565			R92-1252-05	CHIP R 0 OHM J 1/16W	
R909,910			RK73GB2A202J	CHIP R 2.0K J 1/10W		W700-708			R92-1252-05	CHIP R 0 OHM J 1/16W	
R911			RK73GB2A472J	CHIP R 4.7K J 1/10W		W710			R92-1252-05	CHIP R 0 OHM J 1/16W	
R912-914			RK73GB2A470J	CHIP R 47 J 1/10W		W712-717			R92-1252-05	CHIP R 0 OHM J 1/16W	
R915			RK73GB2A103J	CHIP R 10K J 1/10W		W722-724			R92-1252-05	CHIP R 0 OHM J 1/16W	
R916-918			RK73GB2A750J	CHIP R 75 J 1/10W		W726-730			R92-1252-05	CHIP R 0 OHM J 1/16W	
R919			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		S2-6			S70-0856-05	TACT SWITCH	
R920			RK73GB2A472J	CHIP R 4.7K J 1/10W		S8,9			S70-0856-05	TACT SWITCH	
R921			RK73GB2A470J	CHIP R 47 J 1/10W		S200			S62-0863-05	SLIDE SWITCH	
R922-926			RK73GB2A472J	CHIP R 4.7K J 1/10W		S300			S70-0826-05	TACT SWITCH	
R927,928			RK73GB2A302J	CHIP R 3.0K J 1/10W		D102,103			SB05-05CP	DIODE	
R929			RK73GB2A470J	CHIP R 47 J 1/10W		D104-108			EC31QS04	DIODE	
R930-933			RK73GB2A201J	CHIP R 200 J 1/10W		D109,110			D1F60	DIODE	
R934			RK73GB2A302J	CHIP R 3.0K J 1/10W		D112,113			SB05-05CP	DIODE	
R935-938			RK73GB2A472J	CHIP R 4.7K J 1/10W		D114			MA8082-M	ZENER DIODE	
R939-941			RK73GB2A302J	CHIP R 3.0K J 1/10W		D115			MA8056-M	ZENER DIODE	
R942-944			RK73GB2A201J	CHIP R 200 J 1/10W		D116			1SR154-400	DIODE	
R945			RK73GB2A470J	CHIP R 47 J 1/10W		D117,118			RB491D	DIODE	
R946			RK73GB2A201J	CHIP R 200 J 1/10W		D119			RD6.8M(B2)	ZENER DIODE	
R947			RK73GB2A302J	CHIP R 3.0K J 1/10W		D120			RD16S	ZENER DIODE	
R948-956			RK73GB2A472J	CHIP R 4.7K J 1/10W		D200		*	DA204U	DIODE	
R957-959			RK73GB2A470J	CHIP R 47 J 1/10W		D201			MA8047-H	ZENER DIODE	
R960-963			RK73GB2A302J	CHIP R 3.0K J 1/10W		D203-207			MA3062WA	ZENER DIODE	
R964			RK73GB2A102J	CHIP R 1.0K J 1/10W		D208			AVRM1608120M6A	VARIATOR	
R965,966			RK73GB2A201J	CHIP R 200 J 1/10W		D209			DA204U	DIODE	
R967			RK73GB2A102J	CHIP R 1.0K J 1/10W		D210			MA142WA	DIODE	
R968-971			RK73GB2A201J	CHIP R 200 J 1/10W		D211,212			DA204U	DIODE	
R972			RK73GB2A472J	CHIP R 4.7K J 1/10W		D213			MA142WA	DIODE	
R973,974			RK73GB2A302J	CHIP R 3.0K J 1/10W		D214			MA3062WA	ZENER DIODE	
R975			RK73GB2A103J	CHIP R 10K J 1/10W		D215-224			AVRM1608120M6A	VARIATOR	
R976			RK73GB2A302J	CHIP R 3.0K J 1/10W		D225			DA204U	DIODE	
R977-984			RK73GB2A100J	CHIP R 10 J 1/10W		D226			MA8062-M	ZENER DIODE	
R985,986			RK73GB2A223J	CHIP R 22K J 1/10W							

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D227-229 D300 D302,303 D306 D307-310			AVRM1608120M6A DA204U DA204U MA8062-M MA3062WA	VARISTOR DIODE DIODE ZENER DIODE ZENER DIODE	
D311-313 D314 D315 D350 D500			DA204U AVRM1608120M6A MA142WK MA8062-M MA3062WA	DIODE VARISTOR DIODE ZENER DIODE ZENER DIODE	
D501 D502 D503,504 D700,701 D900-910			HVD133 RB491D MA3062WA DA204U AVRM1608270MAB	DIODE DIODE ZENER DIODE DIODE VARISTOR	
IC100-102 IC103 IC104 IC105 IC106			FA7703V TC75W56FU TA78DS05AF PQ1X331M2ZP TC7SH04FU	ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC200 IC202 IC203 IC204 IC205		*	S-24CS02AFT 70F3089YGJ-8R1 LB1836M-TE-L PST9142NR LB1836M-TE-L	MEMORY IC MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC206 IC207 IC208 IC209 IC300		*	TC7SH08F TC7SET08FU NJM4565V TC7W14FU RS-181	MOS-IC MOS-IC ANALOGUE IC MOS-IC ANALOGUE IC	
IC400 IC401 IC402 IC500 IC501			TC7WH123FU IR3Y26A1 M5237ML TA78L05F NJM2235M	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC502 IC503 IC504 IC505 IC506		*	HD74LV157ATTP MM1234XFBE NJM2235M TA78L05F HD6417706F120D	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MICROPROCESSOR IC	
IC507,508 IC509 IC510 IC511 IC512		*	TC7SET08FU NJW1303V CXA3266Q TC7SH08FU TC7W00FU	MOS-IC ANALOGUE IC MOS-IC MOS-IC MOS-IC	
IC513 IC514 IC515 IC516 IC517		*	HD74LVC138TTP TC7SET08FU HD74LV1G04A TC74LCX74FT MM1389XFBE	MOS-IC MOS-IC MOS-IC MOS-IC ANALOGUE IC	
IC518 IC519 IC520 IC521 IC521		*	MBM29DL322B0R2 MBM29DL322B8R3 TC7WH123FU BS616LV1010EI7 CY62126BV70Z1	ROM IC ROM IC MOS-IC SRAM IC MEMORY IC	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC522 IC523 IC524 IC525 IC526		*	MT48LC2M32T7I MN67761 HD74LV1G04A HD74LVC08TTP HD74CBT3244TTP	DRAM IC MOS-IC MOS-IC MOS-IC MOS-IC	
IC527,528 IC529,530 IC529,530 IC531 IC532		*	TC7SH08FU K4S641632HTC75 MT48LC4M16T75I TC7SH32FU NJM2373AF-TE1	MOS-IC DRAM IC DRAM IC MOS-IC ANALOGUE IC	
IC533 IC534 IC535 IC536 IC537		*	HD74LV2G74ATTP TC7SH08FU TC7SH04FU HD74LV2G74ATTP TC7WH241FK	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC	
IC700 IC701 IC702 IC703 IC704		*	K6F1008V2CYF55 TC7SH00FU 29LV160ATI7R0 M4A3212V18TV1 ES6218SF	SRAM IC MOS-IC ROM IC MOS-IC MOS-IC	
IC705 IC707 IC708 IC709 IC710		*	UPC2933T SI-3012KM NJM2373AF-TE1 ADV7170KSU K4S641632HTC75	ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC DRAM IC	
IC710 IC712 IC713 IC714 IC716		*	MT48LC4M16T75I TK15446L NJU7222U50 CY22392FI-K01 HD74LV2G74ATTP	DRAM IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC900 IC901 IC902 IC903 IC904,905		*	DSPB56367PV150 M5280FP NJM4565V PCM1800E CY7C1021CV10ZI	MOS-IC ANALOGUE IC ANALOGUE IC MOS-IC SRAM IC	
IC904,905 IC906 IC907 IC908 IC909		*	IC61LV641610TI TC7SH08FU TC7WH241FK AK4355VF NJU7222U50	MEMORY IC MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC	
IC910 IC911 IC912 IC913 IC914		*	AK4382AVT HD74LV2G125A-E TC7SH08FU TC7WH241FK NJM4580V	ANALOGUE IC MOS-IC MOS-IC MOS-IC ANALOGUE IC	
IC915 IC916 IC917-919 IC920 IC921		*	TC7SH08FU TC7WH241FK NJM4580V TC7SET00FU TC7SET08FU	MOS-IC MOS-IC ANALOGUE IC MOS-IC MOS-IC	
IC922 Q100-103 Q104 Q105 Q107,108		*	TC7WH241FK UN5212 2SD1819A HAT1038R HAT1016R	MOS-IC DIGITAL TRANSISTOR TRANSISTOR FET DUAL FET	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q109		*	HAT3008R	DUAL FET		C13			CD04AY1A221M	ELECTRO 220UF 10WV	
Q110			UN5212	DIGITAL TRANSISTOR		C14			CK73FB1C105K	CHIP C 1.0UF K	
Q111			2SB1218A	TRANSISTOR		C16			CD04BA1H3R3M	ELECTRO 3.3UF 50WV	
Q112			2SD1819A	TRANSISTOR		C17			CK73GB1H561K	CHIP C 560PF K	
Q113			UN5212	DIGITAL TRANSISTOR		C18			CK73GB0J105K	CHIP C 1.0UF K	
Q114			2SA2013	TRANSISTOR		C21			C94-0032-05	ELECTRO 47UF 6.3WV	
Q115			2SD1819A	TRANSISTOR		C22-24			CK73GB1H103K	CHIP C 0.010UF K	
Q200			UN5212	DIGITAL TRANSISTOR		C25			CK73FB1A105K	CHIP C 1.0UF K	
Q201			UN5213	DIGITAL TRANSISTOR		C26			CD04AY1A221M	ELECTRO 220UF 10WV	
Q202			UN5113	DIGITAL TRANSISTOR		C27			CK73GB1E473K	CHIP C 0.047UF K	
Q212			UN5212	DIGITAL TRANSISTOR		C28			CK73FB1C105K	CHIP C 1.0UF K	
Q213			UN5214	DIGITAL TRANSISTOR		C29			C90-5573-05	ELECTRO 220UF 10WV	
Q214			UN5113	DIGITAL TRANSISTOR		C31			CK73FB1A105K	CHIP C 1.0UF K	
Q215			DTB123YK	DIGITAL TRANSISTOR		C32			CK73FB1C105K	CHIP C 1.0UF K	
Q216			UN5212	DIGITAL TRANSISTOR		C33			C94-0034-05	ELECTRO 220UF 6.3WV	
Q217			UN5113	DIGITAL TRANSISTOR		C34			C94-0057-05	ELECTRO 4.7UF 16WV	
Q218			DTB123YK	DIGITAL TRANSISTOR		C35			C94-0151-05	ELECTRO 100UF 16WV	
Q220			UN5213	DIGITAL TRANSISTOR		C36-39			CK73EB1C225K	CHIP C 2.2UF K	
Q221,222			UN5212	DIGITAL TRANSISTOR		C40			C90-5575-05	ELECTRO 22UF 16WV	
Q223			DTB123YK	DIGITAL TRANSISTOR		C41			CK73GB1E223K	CHIP C 0.022UF K	
Q300			UN5212	DIGITAL TRANSISTOR		C42			CK73GB1H103K	CHIP C 0.010UF K	
Q301,302			UN5112	DIGITAL TRANSISTOR		C43,44			CD04BA1E4R7M	ELECTRO 4.7UF 25WV	
Q303,304			UN5214	DIGITAL TRANSISTOR		C45			CK73GB1H103K	CHIP C 0.010UF K	
Q305			UN5112	DIGITAL TRANSISTOR		C100			CK73GB1H102K	CHIP C 1000PF K	
Q306			UN5214	DIGITAL TRANSISTOR		C101			CK73GB1H103K	CHIP C 0.010UF K	
Q307			UN5212	DIGITAL TRANSISTOR		C102			C90-5568-05	ELECTRO 330UF 6.3WV	
Q308			UN5112	DIGITAL TRANSISTOR		C103,104			CK73GB1H103K	CHIP C 0.010UF K	
Q400		*	2SB1189	TRANSISTOR		C105			CK73GB1H104K	CHIP C 0.010UF K	
Q510			2SB1218A	TRANSISTOR		C106			CK73FB1C105K	CHIP C 1.0UF K	
Q511			2SD1819A	TRANSISTOR		C107			CK73GB1H104K	CHIP C 0.010UF K	
Q513,514			2SD1819A	TRANSISTOR		C108-110			CK73GB1H103K	CHIP C 0.010UF K	
Q515			2SB1218A	TRANSISTOR		C111			CK73GB1H104K	CHIP C 0.010UF K	
SWITCH UNIT (X16-2250-00)						C112			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-0404-05	FLAT CABLE (19PIN)		C113			CK73GB1H104K	CHIP C 0.010UF K	
R2			RK73GB2A273J	CHIP R 27K J 1/10W		C114,115			CK73GB1H103K	CHIP C 0.010UF K	
R1			RK73GB2A751J	CHIP R 750 J 1/10W		C201			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1
VR1			R31-0237-05	SEMI FIXED VARIABLE RESISTOR		C201,202			CK73GB1H103K	CHIP C 0.010UF K	K1R1E1
S1			S68-0863-05	PUSH SWITCH		C201,202			CK73GB1H103K	CHIP C 0.010UF K	W1M1
S2,S3			S68-0871-05	PUSH SWITCH		C206			CK73GB1H103K	CHIP C 0.010UF K	K1R1E1
S4			S68-0863-05	PUSH SWITCH		C206			CK73GB1H103K	CHIP C 0.010UF K	W1M1
PH1			T95-0235-05	PHOTO INTERRUPTER		C209			C90-5574-05	ELECTRO 10UF 16WV	K1R1E1
ELECTRIC UNIT (X25-956x-xx)						C209			C90-5574-05	ELECTRO 10UF 16WV	W1M1
C1			CK73GB1E473K	CHIP C 0.047UF K		C211			CC73GCH1H331J	CHIP C 330PF J	K1R1E1
C2			C90-5574-05	ELECTRO 10UF 16WV		C211			CC73GCH1H331J	CHIP C 330PF J	W1M1
C3,4			CK73GB1H103K	CHIP C 0.010UF K		C212			C90-5574-05	ELECTRO 10UF 16WV	K1R1E1
C5			C90-2866-05	ELECTRO 220UF 16WV		C212			C90-5574-05	ELECTRO 10UF 16WV	W1M1
C6			C90-5572-05	ELECTRO 100UF 10WV		C213			CK73GB1H103K	CHIP C 0.010UF K	
C7			C90-5428-05	ELECTRO 3900UF 16WV		C215-217			CK73GB1H103K	CHIP C 0.010UF K	
C8			CK73GB1H103K	CHIP C 0.010UF K		C219,220			CC73GCH1H100D	CHIP C 10PF D	K1R1E1
C9,10			CK73FB1C105K	CHIP C 1.0UF K		C219,220			CC73GCH1H100D	CHIP C 10PF D	W1M1
C11			CK73GB1C104K	CHIP C 0.10UF K		C222,223			CK73GB1H104K	CHIP C 0.010UF K	
C12			CK73FB1A105K	CHIP C 1.0UF K		C224			CK73GB1H103K	CHIP C 0.010UF K	
						C225			CC73GCH1H151J	CHIP C 150PF J	
						C226			CK73GB1A474K	CHIP C 0.47UF K	
						C227			CK73GB1E223K	CHIP C 0.022UF K	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C228			CK73GB1H103K	CHIP C 0.010UF K	
C229			C90-5574-05	ELECTRO 10UF 16WV	
C230			C94-0052-05	ELECTRO 2.2UF 50WV	
C231-243			CK73GB1H103K	CHIP C 0.010UF K	E1W1M1
C231-243			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1
C244			C90-5574-05	ELECTRO 10UF 16WV	E1W1M1
C244			C90-5574-05	ELECTRO 10UF 16WV	H1X1C1
C245			CK73GB1H103K	CHIP C 0.010UF K	E1W1M1
C245			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1
C300			CK73GB1H104K	CHIP C 0.10UF K	
C301			C92-0675-05	ELECTRO 4.7UF 25WV	
C302			C92-1428-05	ELECTRO 330UF 6.3WV	
C303			C92-0675-05	ELECTRO 4.7UF 25WV	
C304			C92-0093-05	CHIP C 100UF 6.3WV	
C305			CK73GB1H104K	CHIP C 0.10UF K	
C306			C92-0675-05	ELECTRO 4.7UF 25WV	
C307			C92-1428-05	ELECTRO 330UF 6.3WV	
C308			C92-0675-05	ELECTRO 4.7UF 25WV	
C309			C92-0093-05	CHIP C 100UF 6.3WV	
C310			CK73GB1H104K	CHIP C 0.10UF K	
C311			C92-0675-05	ELECTRO 4.7UF 25WV	
C312			CK73GB1H104K	CHIP C 0.10UF K	
C313			C92-1428-05	ELECTRO 330UF 6.3WV	
C314,315			C92-0675-05	ELECTRO 4.7UF 25WV	
C316			C92-0093-05	CHIP C 100UF 6.3WV	
C317			C92-0092-05	CHIP C 47UF 6.3WV	
C318			C94-0035-05	ELECTRO 22UF 10WV	
C319			C92-0675-05	ELECTRO 4.7UF 25WV	
C320			C90-5574-05	ELECTRO 10UF 16WV	
C321,322			CK73GB1C104K	CHIP C 0.10UF K	
C323			C90-5573-05	ELECTRO 220UF 10WV	
C324			CK73GB1H103K	CHIP C 0.010UF K	
C325			C90-5573-05	ELECTRO 220UF 10WV	
C326			CK73GB1C104K	CHIP C 0.10UF K	
C327			CK73GB1H103K	CHIP C 0.010UF K	
C328			C90-5573-05	ELECTRO 220UF 10WV	
C329			C90-5568-05	ELECTRO 330UF 6.3WV	
C330			CK73GB1C104K	CHIP C 0.10UF K	
C331			C92-0672-05	ELECTRO 22UF 16WV	
C332,333			CK73GB1C104K	CHIP C 0.10UF K	
C334			CK73GB1H104K	CHIP C 0.10UF K	
C342,343			CK73EB0J106K	CHIP C 10UF K	
C344			CK73GB1H103K	CHIP C 0.010UF K	
C400-405			CK73GB1C104K	CHIP C 0.10UF K	
C406			CK73GB1H103K	CHIP C 0.010UF K	
C407,408			CK73GB1A474K	CHIP C 0.47UF K	
C409			CK73FB1C105K	CHIP C 1.0UF K	
C410			CK73GB1A474K	CHIP C 0.47UF K	
C411-414			CK73FB1C105K	CHIP C 1.0UF K	
C415			CK73GB1A474K	CHIP C 0.47UF K	
C416-422			CK73FB1C105K	CHIP C 1.0UF K	
C423			CK73GB1A224K	CHIP C 0.22UF K	
C424			CK73FB1C105K	CHIP C 1.0UF K	
C425			CK73GB1A224K	CHIP C 0.22UF K	
C426			CK73EB1A475K	CHIP C 4.7UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C427			CK73FB1C105K	CHIP C 1.0UF K	
C428			CK73GB1H103K	CHIP C 0.010UF K	
C429			CK73GB1H104K	CHIP C 0.10UF K	
C430			C94-0039-05	ELECTRO 10UF 16WV	
C431,432			CK73EB1A475K	CHIP C 4.7UF K	
C433,434			CK73FB1C105K	CHIP C 1.0UF K	
C436			CK73GB1C104K	CHIP C 0.10UF K	
C437,438			CK73FB1C105K	CHIP C 1.0UF K	
C439			C90-5575-05	ELECTRO 22UF 16WV	
C440			C94-0039-05	ELECTRO 10UF 16WV	
C441-446		*	CD04AX1A100M	ELECTRO 10UF 10WV	
C447,448			CK73FB1C105K	CHIP C 1.0UF K	
C449			CK73GB1H103K	CHIP C 0.010UF K	
C450			C90-5572-05	ELECTRO 100UF 10WV	
C451-456			C94-0040-05	ELECTRO 22UF 16WV	
C457			CK73GB1H103K	CHIP C 0.010UF K	
C459,460			CK73GB1H561K	CHIP C 560PF K	
C461			CK73GB1H104K	CHIP C 0.10UF K	
C462			CK73GB1A474K	CHIP C 0.47UF K	
C465			CD04AY1C220M	ELECTRO 22UF 16WV	
C466			CK73GB0J105K	CHIP C 1.0UF K	
C482			CK73GB1H103K	CHIP C 0.010UF K	
C483-485			CK73FB1C105K	CHIP C 1.0UF K	
C486			C94-0039-05	ELECTRO 10UF 16WV	
C487			CK73GB1A474K	CHIP C 0.47UF K	
C488			C94-0039-05	ELECTRO 10UF 16WV	
C489			CK73GB1H103K	CHIP C 0.010UF K	
C490			C94-0039-05	ELECTRO 10UF 16WV	
C491,492			CK73EB0J106K	CHIP C 10UF K	
C493-495		*	CD04AX1A100M	ELECTRO 10UF 10WV	
C496-499			C94-0179-05	ELECTRO 0.22UF 50WV	
C500-503			C94-0054-05	ELECTRO 4.7UF 50WV	
C504-506			CK73GB1H103K	CHIP C 0.010UF K	
C507			C94-0040-05	ELECTRO 22UF 16WV	
C508			CK73GB1H103K	CHIP C 0.010UF K	
C509			C90-5573-05	ELECTRO 220UF 10WV	
C510,511			C90-5577-05	ELECTRO 47UF 16WV	
C512		*	C94-0043-05	ELECTRO 100UF 16WV	
C513-516			C90-5577-05	ELECTRO 47UF 16WV	
C517		*	C94-0043-05	ELECTRO 100UF 16WV	
C518-523			CK73GB1H103K	CHIP C 0.010UF K	
C524,525			C90-5574-05	ELECTRO 10UF 16WV	
C526,527			CK73GB1H222K	CHIP C 2200PF K	
C528-533			C90-5577-05	ELECTRO 47UF 16WV	
C534			C90-5568-05	ELECTRO 330UF 6.3WV	
C535-540			CK73GB1H103K	CHIP C 0.010UF K	
C541,542			C94-0040-05	ELECTRO 22UF 16WV	
C543,544			C94-0037-05	ELECTRO 47UF 10WV	
C545			CK73GB1H103K	CHIP C 0.010UF K	
C600			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C602			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C606,607		*	C94-0054-05	ELECTRO 4.7UF 50WV	
C608,609			C90-5565-05	ELECTRO 47UF 6.3WV	
C611,612			C94-0040-05	ELECTRO 22UF 16WV	
C613,614			CK73GB1H103K	CHIP C 0.010UF K	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C615			C94-0035-05	ELECTRO 22UF 10WV		R15			R92-2063-05	CHIP R 680 J 1/2W	
C700			CD04AY1C220M	ELECTRO 22UF 16WV		R16,17			R92-0365-05	CHIP R 1.0K J 1/2W	
C701			C94-0179-05	ELECTRO 0.22UF 50WV		R18			RK73GB2A153J	CHIP R 15K J 1/10W	
C704			CK73GB0J105K	CHIP C 1.0UF K		R19			RK73GB2A223J	CHIP R 22K J 1/10W	
C705,706			CK73GB1H103K	CHIP C 0.010UF K		R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C711,712			CK73GB1H473K	CHIP C 0.047UF K		R21			RK73GH1J273D	CHIP R 27K D 1/16W	
C713			CK73GB1A474K	CHIP C 0.47UF K		R22			RK73GH1J472D	CHIP R 4.7K D 1/16W	
CN1			E40-3246-05	PIN ASSY		R23,24			RK73FB2B472J	CHIP R 4.7K J 1/8W	
CN11			E40-4970-05	FLAT CABLE CONNECTOR		R25			R92-0366-05	CHIP R 560 J 1W	K1R1M1
CN20,21			E40-9423-05	SOCKET FOR PIN ASSY		R25			R92-0366-05	CHIP R 560 J 1W	H1X1C1
CN22,23			E40-9421-05	PIN ASSY							
△ J1			E58-0836-05	RECTANGULAR RECEPTACLE		R26			RK73GB2A561J	CHIP R 560 J 1/10W	
J2		*	E58-0969-05	RECTANGULAR RECEPTACLE		R27			RK73GB2A223J	CHIP R 22K J 1/10W	K1R1M1
J200		*	E30-6208-15	CORD WITH PLUG		R27			RK73GB2A223J	CHIP R 22K J 1/10W	H1X1C1
J300		*	E58-0964-05	RECTANGULAR RECEPTACLE		R28			RK73FB2B221J	CHIP R 220 J 1/8W	
J301		*	E58-0963-05	RECTANGULAR RECEPTACLE		R30			RK73FB2B221J	CHIP R 220 J 1/8W	
J500			E63-0865-05	PIN JACK							
J501		*	E63-0891-05	PIN JACK		R31			RK73GB2A334J	CHIP R 330K J 1/10W	
J502			E63-0864-05	PIN JACK		R34			RK73GB2A103J	CHIP R 10K J 1/10W	
J600			E56-0843-05	CYLINDRICAL RECEPTACLE		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
J601			E56-0846-05	CYLINDRICAL RECEPTACLE		R36			RK73FB2B561J	CHIP R 560 J 1/8W	
P600			E23-0745-05	TERMINAL		R37			RK73GB2A153J	CHIP R 15K J 1/10W	
A1	2H	*	F09-1759-05	FAN		R38			RK73GB2A103J	CHIP R 10K J 1/10W	
△ L1			L33-1063-15	CHOKE COIL		R39			RK73GB2A223J	CHIP R 22K J 1/10W	
L2			L40-2205-34	SMALL FIXED INDUCTOR (22UH)		R40			RK73GB2A473J	CHIP R 47K J 1/10W	
L100			L40-1005-34	SMALL FIXED INDUCTOR		R41			RK73GH1J273D	CHIP R 27K D 1/16W	
L101			L92-0075-05	CHIP FERRITE		R42			RK73GH1J472D	CHIP R 4.7K D 1/16W	
L102-106			L92-0330-05	CHIP FERRITE							
L200			L40-4795-34	SMALL FIXED INDUCTOR	K1R1E1	R43			RK73GB2A153J	CHIP R 15K J 1/10W	
L200			L40-4795-34	SMALL FIXED INDUCTOR	W1M1	R44			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L203			L33-1123-05	LINE FILTER COIL		R45			RK73GB2A223J	CHIP R 22K J 1/10W	
L204-207			L40-4795-34	SMALL FIXED INDUCTOR		R46			RK73GB2A104J	CHIP R 100K J 1/10W	
L209			L40-1005-34	SMALL FIXED INDUCTOR		R47			RK73GH1J243D	CHIP R 24K D 1/16W	
L400,401			L40-1005-34	SMALL FIXED INDUCTOR		R48			RK73GH1J432D	CHIP R 4.3K D 1/16W	
L403			L92-0330-05	CHIP FERRITE		R49			R92-3243-05	SMALL-RD 3.3K J 1/2W	
X100			L78-0821-05	RESONATOR		R50			RK73GB2A912J	CHIP R 9.1K J 1/10W	
X200			L77-2002-05	CRYSTAL RESONATOR	K1R1E1	R51			RK73GB2A104J	CHIP R 100K J 1/10W	
X200			L77-2002-05	CRYSTAL RESONATOR	W1M1	R52			RK73FB2B221J	CHIP R 220 J 1/8W	
B	2H	*	N09-4299-05	TAPTITE SCREW (PAN HEAD B TI)		R53			RK73EB2E153J	CHIP R 15K J 1/4W	
C	2H		N35-3006-46	BINDING HEAD MACHINE SCREW		R54			RK73GB2A473J	CHIP R 47K J 1/10W	
D	2H		N35-3023-46	BINDING HEAD MACHINE SCREW		R55			RK73GB2A153J	CHIP R 15K J 1/10W	
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W		R56			RK73EB2E123J	CHIP R 12K J 1/4W	
R2			RK73GB2A222J	CHIP R 2.2K J 1/10W		R57			RK73GH1J153D	CHIP R 15K D 1/16W	
R3			RK73GB2A101J	CHIP R 100 J 1/10W		R58			RK73GH1J512D	CHIP R 5.1K D 1/16W	
R4			RK73EB2E103J	CHIP R 10K J 1/4W		R59			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R5,6			RK73GB2A223J	CHIP R 22K J 1/10W		R60			RK73GB2A104J	CHIP R 100K J 1/10W	
R7			RK73GB2A222J	CHIP R 2.2K J 1/10W		R61			RK73GB2A473J	CHIP R 47K J 1/10W	
R8			RK73GB2A104J	CHIP R 100K J 1/10W		R62			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R9,10			RK73EB2E750J	CHIP R 75 J 1/4W		R63			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R11			RK73FB2B221J	CHIP R 220 J 1/8W		R64			RK73GB2A104J	CHIP R 100K J 1/10W	
R12			RK73EB2E472J	CHIP R 4.7K J 1/4W		R65			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R13			RK73GB2A223J	CHIP R 22K J 1/10W		R66			RK73GB2A470J	CHIP R 47 J 1/10W	
R14			RK73GB2A104J	CHIP R 100K J 1/10W		R67			RK73GB2A752J	CHIP R 7.5K J 1/10W	
						R68			RK73GB2A913J	CHIP R 91K J 1/10W	
						R69			RK73GB2A563J	CHIP R 56K J 1/10W	
						R70			RK73GB2A470J	CHIP R 47 J 1/10W	
						R71			RK73GB2A103J	CHIP R 10K J 1/10W	
						R72,73			RK73GB2A913J	CHIP R 91K J 1/10W	

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R74			RK73GB2A473J	CHIP R 47K J 1/10W	
R75			R92-1252-05	CHIP R 0 OHM J 1/16W	E1W1
R77			R92-1252-05	CHIP R 0 OHM J 1/16W	
R100-106			RK73GB2A104J	CHIP R 100K J 1/10W	H1X1C1
R100,101			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1
R100,101			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1
R103			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1
R103			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1
R105			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1
R105			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R109			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R110-113			RK73GB2A104J	CHIP R 100K J 1/10W	
R114			RK73GB2A223J	CHIP R 22K J 1/10W	
R115,116			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R118-122			RK73GB2A104J	CHIP R 100K J 1/10W	
R123,124			RK73GB2A101J	CHIP R 100 J 1/10W	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R129			R92-1252-05	CHIP R 0 OHM J 1/16W	
R130-132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133			RK73GB2A101J	CHIP R 100 J 1/10W	
R134			RK73GB2A103J	CHIP R 10K J 1/10W	
R135			RK73GB2A101J	CHIP R 100 J 1/10W	
R136			RK73GB2A103J	CHIP R 10K J 1/10W	
R138			R92-1252-05	CHIP R 0 OHM J 1/16W	
R140,141			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R142			RK73GB2A104J	CHIP R 100K J 1/10W	
R143,144			RK73GB2A101J	CHIP R 100 J 1/10W	
R145,146			RK73GB2A103J	CHIP R 10K J 1/10W	
R147,148			RK73GB2A101J	CHIP R 100 J 1/10W	
R149			RK73GB2A104J	CHIP R 100K J 1/10W	
R150,151			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1W1M1
R150,151			RK73GB2A102J	CHIP R 1.0K J 1/10W	X1C1
R155			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1X1C1
R155,156			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1W1
R159,160			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R161			RK73GB2A103J	CHIP R 10K J 1/10W	
R162			RK73GB2A104J	CHIP R 100K J 1/10W	R1M1H1
R162			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1
R163			RK73GB2A104J	CHIP R 100K J 1/10W	K1
R163,164			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1
R164			RK73GB2A104J	CHIP R 100K J 1/10W	R1X1C1
R165			RK73GB2A104J	CHIP R 100K J 1/10W	M1
R165,166			RK73GB2A104J	CHIP R 100K J 1/10W	K1H1
R166			RK73GB2A104J	CHIP R 100K J 1/10W	R1
R167			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R167			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1
R169-174			R92-1252-05	CHIP R 0 OHM J 1/16W	
R175,176			RK73GB2A104J	CHIP R 100K J 1/10W	
R202,203			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E1
R202,203			RK73GB2A222J	CHIP R 2.2K J 1/10W	W1M1
R204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E1
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	W1M1
R206			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R211			RK73GB2A223J	CHIP R 22K J 1/10W	
R214			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R215			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R216			RK73GB2A103J	CHIP R 10K J 1/10W	
R217			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R219			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R221			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R221			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R222			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R222			RK73GB2A104J	CHIP R 100K J 1/10W	H1X1C1
R223			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R223			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R224			RK73GB2A562J	CHIP R 5.6K J 1/10W	E1W1M1
R224			RK73GB2A562J	CHIP R 5.6K J 1/10W	H1X1C1
R225			RK73GB2A153J	CHIP R 15K J 1/10W	E1W1M1
R225			RK73GB2A153J	CHIP R 15K J 1/10W	H1X1C1
R226			RK73GB2A823J	CHIP R 82K J 1/10W	E1W1M1
R226			RK73GB2A823J	CHIP R 82K J 1/10W	H1X1C1
R227			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R227			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R228			RK73GB2A333J	CHIP R 33K J 1/10W	E1W1M1
R228			RK73GB2A333J	CHIP R 33K J 1/10W	H1X1C1
R229			RK73GB2A272J	CHIP R 2.7K J 1/10W	E1W1M1
R229			RK73GB2A272J	CHIP R 2.7K J 1/10W	H1X1C1
R230-233			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R230-233			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R234			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1
R234			RK73GB2A222J	CHIP R 2.2K J 1/10W	H1X1C1
R300			RK73FB2B100J	CHIP R 10 J 1/8W	
R301			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R302,303			RK73FB2B100J	CHIP R 10 J 1/8W	
R304			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R305,306			RK73FB2B100J	CHIP R 10 J 1/8W	
R307			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R308			RK73FB2B100J	CHIP R 10 J 1/8W	
R309			RK73EB2E100J	CHIP R 10 J 1/4W	
R310			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R311			RK73FB2B100J	CHIP R 10 J 1/8W	
R312-316			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R317-319			RK73GB2A223J	CHIP R 22K J 1/10W	
R320-327			RK73EB2E101J	CHIP R 100 J 1/4W	
R328-330			RK73EB2E750J	CHIP R 75 J 1/4W	
R331			RK73GB2A750J	CHIP R 75 J 1/10W	
R332			RK73EB2E750J	CHIP R 75 J 1/4W	
R333,334			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R335-339			RK73GB2A133J	CHIP R 13K J 1/10W	
R340			RK73GB2A103J	CHIP R 10K J 1/10W	
R343			RK73EB2E100J	CHIP R 10 J 1/4W	
R344			RK73GB2A473J	CHIP R 47K J 1/10W	
R345,346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R347,348			RK73GB2A471J	CHIP R 470 J 1/10W	
R349-351			RK73EB2E100J	CHIP R 10 J 1/4W	

K : KVT-915DVD

R1 : KVT-915DVD

M1 : KVT-925DVD

W1 : KVT-925DVD

M1 : KVT-935DVD

H1 : KVT-935DVD

X1 : KVT-945DVD

C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R400-402			RK73GB2A680J	CHIP R 68 J 1/10W		R608			RK73EB2E100J	CHIP R 10 J 1/4W	
R403			RK73GB2A152J	CHIP R 1.5K J 1/10W		R609			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R404-416			RK73GB2A562J	CHIP R 5.6K J 1/10W		R610			RK73EB2E101J	CHIP R 100 J 1/4W	
R417			R92-1252-05	CHIP R 0 OHM J 1/16W		R611-614			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R418			RK73GB2A562J	CHIP R 5.6K J 1/10W		R615,616			RK73EB2E101J	CHIP R 100 J 1/4W	
R419			R92-1252-05	CHIP R 0 OHM J 1/16W		R617			RK73GB2A750J	CHIP R 75 J 1/10W	
R422,423			RK73GB2A223J	CHIP R 22K J 1/10W		R700			RK73GB2A223J	CHIP R 22K J 1/10W	
R424			RK73GB2A102J	CHIP R 1.0K J 1/10W		R702			RK73GB2A103J	CHIP R 10K J 1/10W	
R425,426			RK73GB2A472J	CHIP R 4.7K J 1/10W		R703			RK73GB2A101J	CHIP R 100 J 1/10W	
R427-434			RK73GB2A103J	CHIP R 10K J 1/10W		R704			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R435-440			RK73GB2A471J	CHIP R 470 J 1/10W		R705			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R441-446			RK73GB2A223J	CHIP R 22K J 1/10W		R706			RK73GB2A103J	CHIP R 10K J 1/10W	
R448			RK73GB2A473J	CHIP R 47K J 1/10W		D1			RM10ZLF	DIODE	
R451			RK73GB2A242J	CHIP R 2.4K J 1/10W		D2			MA8056-M	ZENER DIODE	
R452			RK73GB2A101J	CHIP R 100 J 1/10W		D3			RB160L-40	DIODE	
R453			RK73GB2A103J	CHIP R 10K J 1/10W		D4			MA8056-M	ZENER DIODE	
R454			RK73GB2A562J	CHIP R 5.6K J 1/10W		D5,6			D1F60	DIODE	
R455			RK73GB2A103J	CHIP R 10K J 1/10W		D5,6			1SR154-400	DIODE	
R456-459			RK73GB2A102J	CHIP R 1.0K J 1/10W		D7			DAP202U	DIODE	
R460,461			RK73GB2A103J	CHIP R 10K J 1/10W		D7			MA142WA	DIODE	
R462			RK73GB2A682J	CHIP R 6.8K J 1/10W		D8,9			D1F60	DIODE	
R463			RK73GB2A103J	CHIP R 10K J 1/10W		D8,9			1SR154-400	DIODE	
R464			RK73GB2A104J	CHIP R 100K J 1/10W		D10			MA8068-M	ZENER DIODE	
R465			RK73GB2A102J	CHIP R 1.0K J 1/10W		D11			MA8056-M	ZENER DIODE	
R466-468			RK73GB2A103J	CHIP R 10K J 1/10W		D12			MA8047-M	ZENER DIODE	
R469-472			RK73GB2A223J	CHIP R 22K J 1/10W		D13			DAN202U	DIODE	
R473,474			RK73GB2A103J	CHIP R 10K J 1/10W		D13			MA142WK	DIODE	
R475			RK73GB2A473J	CHIP R 47K J 1/10W		D14			MA8068-M	ZENER DIODE	
R476			RK73EB2E102J	CHIP R 1.0K J 1/4W		D15			DAP202U	DIODE	
R477			RK73GB2A104J	CHIP R 100K J 1/10W		D15			MA142WA	DIODE	
R478			RK73GB2A103J	CHIP R 10K J 1/10W		D16			MA3062WA	ZENER DIODE	
R479			RK73GB2A102J	CHIP R 1.0K J 1/10W		D17			MA3110-M	ZENER DIODE	
R480			RK73GB2A682J	CHIP R 6.8K J 1/10W		D18			MA8056-M	ZENER DIODE	
R481,482			RK73GB2A103J	CHIP R 10K J 1/10W		D19			MA8068-M	ZENER DIODE	
R500			RK73EB2E102J	CHIP R 1.0K J 1/4W		D101-104			DAP202U	DIODE	
R501			RK73EB2E101J	CHIP R 100 J 1/4W		D101-104			MA142WA	DIODE	
R502			RK73EB2E102J	CHIP R 1.0K J 1/4W		D105,106			DAN202U	DIODE	
R503			RK73EB2E101J	CHIP R 100 J 1/4W		D105,106			MA142WK	DIODE	
R504,505			RK73EB2E102J	CHIP R 1.0K J 1/4W		D107			DAP202U	DIODE	
R506,507			RK73GB2A750J	CHIP R 75 J 1/10W		D107			MA142WA	DIODE	
R508-513			RK73FB2B473J	CHIP R 47K J 1/8W		D201			IMSA-6801	SURGE ABSORBER	
R514-519			RK73FB2B103J	CHIP R 10K J 1/8W		D202			DAN202U	DIODE	E1W1M1
R520,521			RK73GB2A361J	CHIP R 360 J 1/10W		D202			DAN202U	DIODE	H1X1C1
R522-527			RK73FB2B223J	CHIP R 22K J 1/8W		D202			MA142WK	DIODE	E1W1M1
R528,529			RK73GB2A223J	CHIP R 22K J 1/10W		D202			MA142WK	DIODE	H1X1C1
R530-532			RK73GB2A101J	CHIP R 100 J 1/10W		D300-311			DA204U	DIODE	
R533-538			RK73FB2B820J	CHIP R 82 J 1/8W		D312			MA3062WA	ZENER DIODE	
R539			RK73GB2A361J	CHIP R 360 J 1/10W		D316			MA3062-M	ZENER DIODE	
R540			RK73EB2E750J	CHIP R 75 J 1/4W		D317-319			MA3062WA	ZENER DIODE	
R541			RK73GB2A361J	CHIP R 360 J 1/10W		D320-323			DA204U	DIODE	
R600-602			RK73EB2E102J	CHIP R 1.0K J 1/4W		D325			DAP202U	DIODE	
R603			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D325			MA142WA	DIODE	
R604,605			RK73EB2E102J	CHIP R 1.0K J 1/4W		D326,327			MA3062WA	ZENER DIODE	
R606			RK73EB2E100J	CHIP R 10 J 1/4W		D400			DA204U	DIODE	
R607			RK73EB2E4R7J	CHIP R 4.7 J 1/4W							

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D402 D404 D405-414 D405-414 D415-418			DA204U DA204U D1F60 1SR154-400 DAP202U	DIODE DIODE DIODE DIODE DIODE	
D415-418 D422 D422 D423 D425,426			MA142WA DAP202U MA142WA MA8068-M MA3062WA	DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D500-505 D506-508 D506-508 D509-516 D600-605		*	DA204U DAP202U MA142WA MAZ9120H DA204U	DIODE DIODE DIODE ZENER DIODE DIODE	
D606-612 D700,701 D700,701 IC1 IC2			MA3062WA DAP202U MA142WA M5237ML MM1108XFFE	ZENER DIODE DIODE DIODE ANALOGUE IC ANALOGUE IC	
IC3-5 IC6 IC6 IC10 IC12		*	M5237ML ICL7660SIBA TC7662BEOA 703030BYGF-M12 S-24CS02AFT	ANALOGUE IC ANALOGUE IC ANALOGUE IC MICROCONTROLLER IC MEMORY IC	E1W1
IC13 IC14 IC15 IC16 IC21		*	S-80837CNNB TC7W14FU SN74LV10APWR TC7W08FU TDA7479D	MOS-IC MOS-IC MOS-IC MOS-IC ANALOGUE IC	K1R1E1
IC21 IC22 IC23 IC23 IC31-34			TDA7479D TDA7407D NJM4565M-TE2 NJM4565M-TE2 BA3121F	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	W1M1 E1W1M1 H1X1C1
IC36,37 IC40 IC41 IC42 IC43			NJM2267V MM1234XFBE CXA2069Q NJM4580V TC9215AF	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC MOS-IC	
IC44 IC45 IC47 IC50,51 IC52-54			TDA7501 TA8273H NJM4565V BA3121F NJM4565M-TE2	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC60 IC61,62 IC63 IC70 Q1			TC7SET08FU BA3121F TC7SH14FU TA8263BH DTC144EUA	MOS-IC ANALOGUE IC MOS-IC ANALOGUE IC DIGITAL TRANSISTOR	
Q1 Q2 Q3 Q4 Q5			UN5213 2SC4081 2SA1576A 2SB1443 DTA124EUA	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q5 Q6 Q7 Q8 Q8			UN5112 2SB1184 2SC4081 DTC124EUA UN5212	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q9 Q10 Q10 Q11 Q12			2SA1906 DTC114YUA UN5214 2SB1443 DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	K1R1M1
Q12 Q12 Q12 Q13 Q14			DTC114YUA UN5214 UN5214 2SA1576A DTC114YUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	H1X1C1 K1R1M1 H1X1C1
Q14 Q15 Q15 Q16 Q17			UN5214 DTA114EUA UN5111 2SA1576A 2SB1240	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	E1W1
Q17,18 Q17,18 Q19 Q20 Q21			2SB1240 2SB1240 2SB1548(P) 2SA1906 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K1R1M1 H1X1C1
Q22 Q23 Q24 Q25 Q25			DTA123JK 2SC4081 2SB1548(P) DTA124EUA UN5112	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q26 Q26 Q27 Q27 Q28			DTC144EUA UN5213 DTC124EUA UN5212 2SB1443	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q29 Q30 Q31 Q32 Q33			2SC4081 2SA1576A 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q34 Q35 Q36 Q36 Q37			2SA1576A 2SC4081 DTC144EUA UN5213 DTA124EUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q37 Q100-104 Q100-104 Q201 Q203			UN5112 DTA124EUA UN5112 2SC4081 2SB1188(Q,R)	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q204 Q204 Q206 Q207 Q207			DTC124EUA UN5212 2SC4081 DTC124EUA UN5212	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
Q210			2SC4081	TRANSISTOR	E1W1M1	C109			CK73FB1C105K	CHIP C 1.0UF K	
Q210			2SC4081	TRANSISTOR	H1X1C1	C110			CK73GB1H103K	CHIP C 0.010UF K	
Q211			DTC114EUA	DIGITAL TRANSISTOR	E1W1M1	C111			C93-1210-05	CHIP C 10UF K	
Q211			DTC114EUA	DIGITAL TRANSISTOR	H1X1C1	C112			CK73FB1E154K	CHIP C 0.15UF K	
Q211			UN5211	DIGITAL TRANSISTOR	E1W1M1	C113			CK73EB1C225K	CHIP C 2.2UF K	
Q211			UN5211	DIGITAL TRANSISTOR	H1X1C1	C114			CK73FB1C224K	CHIP C 0.22UF K	
Q212			DTA124EUA	DIGITAL TRANSISTOR	E1W1M1	C115			CK73GB1H104K	CHIP C 0.10UF K	
Q212			DTA124EUA	DIGITAL TRANSISTOR	H1X1C1	C116			CE32BB0J221M	CHIP EL 220UF 6.3WV	
Q212			UN5112	DIGITAL TRANSISTOR	E1W1M1	C118			CK73GB1H103K	CHIP C 0.010UF K	
Q212			UN5112	DIGITAL TRANSISTOR	H1X1C1	C210			CK73GB1H103K	CHIP C 0.010UF K	
Q400,401			2SA1576A	TRANSISTOR		C211			CK73EB1A475K	CHIP C 4.7UF K	
Q402-407			DTC323TU	DIGITAL TRANSISTOR		C230			CK73GB1H103K	CHIP C 0.010UF K	
Q408			DTA124EUA	DIGITAL TRANSISTOR		C231,232			CK73DF1E106Z	CHIP C 10UF Z	
Q408			UN5112	DIGITAL TRANSISTOR		C233			CK73GB1H103K	CHIP C 0.010UF K	
Q410,411			DTC323TU	DIGITAL TRANSISTOR		C234			CC73HCH1H560J	CHIP C 56PF J	
Q500			DTA124EUA	DIGITAL TRANSISTOR		C301,302			CK73DF1E106Z	CHIP C 10UF Z	
Q500			UN5112	DIGITAL TRANSISTOR		C303			CK73GB1H103K	CHIP C 0.010UF K	
Q501,502			DTC323TU	DIGITAL TRANSISTOR		C304			CK73GB1H104K	CHIP C 0.10UF K	
Q503			2SA1576A	TRANSISTOR		C305,306			CK73GB1H103K	CHIP C 0.010UF K	
TH41			PT722A100C	POSITIVE RESISTOR		C307			CE32BB0J221M	CHIP EL 220UF 6.3WV	
TH700			PT722A100C	POSITIVE RESISTOR		C308			CK73GB1H103K	CHIP C 0.010UF K	
A200			W02-3416-05	FM/AM FRONT-END	K1R1	C309			CC73HCH1H100D	CHIP C 10PF D	
A200			W02-3417-05	FM/AM FRONT-END	E1W1M1	C310			CK73HB1H561K	CHIP C 560PF K	
A200			W02-3417-05	FM/AM FRONT-END	H1X1C1	C311			CK73HB1C103K	CHIP C 0.010UF K	
						C312			CK73GB1H103K	CHIP C 0.010UF K	
VIDEO UNIT (X35-4280-01)						C313,314			CK73HB1C103K	CHIP C 0.010UF K	
C1,2			CK73DF1E106Z	CHIP C 10UF Z		C315,316			CK73GB1H104K	CHIP C 0.10UF K	
C3			C93-1281-05	CHIP C 0.47UF K		C317			CK73HB1C103K	CHIP C 0.010UF K	
C5			C93-1273-05	CHIP C 15PF J		C318,319			CK73GB1H104K	CHIP C 0.10UF K	
C6			C93-1278-05	CHIP C 0.018UF K		C320			CC73HCH1H560J	CHIP C 56PF J	
C7			CK73GB1E473K	CHIP C 0.047UF K		C321			CK73GB1H104K	CHIP C 0.10UF K	
C8			C93-1269-05	CHIP C 220PF J		C322			CC73GCH1E102J	CHIP C 1000PF J	
C9			CK73GB0J225K	CHIP C 2.2UF K		C323			CC73HCH1H101J	CHIP C 100PF J	
C10			CK73GB1H103K	CHIP C 0.010UF K		C324,325			CK73HB1C103K	CHIP C 0.010UF K	
C11			CK73GB0J225K	CHIP C 2.2UF K		C326			CC73GCH1H681J	CHIP C 680PF J	
C13			CK73GB1A474K	CHIP C 0.47UF K		C327,328			CK73GB1H104K	CHIP C 0.10UF K	
C14			CK73HB1C103K	CHIP C 0.010UF K		C329			CC73HCH1H390J	CHIP C 39PF J	
C15			CK73GB1E473K	CHIP C 0.047UF K		C330			CE32BB0J221M	CHIP EL 220UF 6.3WV	
C16			CK73HB1C183K	CHIP C 0.018UF K		C331,332			CC73HCH1H390J	CHIP C 39PF J	
C17			CK73HB1C103K	CHIP C 0.010UF K		C333			CK73GB1H104K	CHIP C 0.10UF K	
C18			C93-1281-05	CHIP C 0.47UF K		C334			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB0J225K	CHIP C 2.2UF K		C335,336			CK73GB1H104K	CHIP C 0.10UF K	
C22			CK73HB1H152K	CHIP C 1500PF K		C338			CK73DF1C106Z	CHIP C 10UF Z	
C23			CK73DF1E106Z	CHIP C 10UF Z		C339			CK73HB1C103K	CHIP C 0.010UF K	
C24			CK73GB1H103K	CHIP C 0.010UF K		C401			CK73HB1H102K	CHIP C 1000PF K	
C25			C93-1270-05	CHIP C 3300PF K		C421,422			CK73FB1C105K	CHIP C 1.0UF K	
C26			CK73GB1H103K	CHIP C 0.010UF K		C423			CK73EB0J106K	CHIP C 10UF K	
C101			CK73GB1H104K	CHIP C 0.10UF K		C424			CK73HB1C103K	CHIP C 0.010UF K	
C102			CK73DF1C106Z	CHIP C 10UF Z		C425			CK73FB1C105K	CHIP C 1.0UF K	
C103			CK73GB1H103K	CHIP C 0.010UF K		C426			CK73EB1E105K	CHIP C 1.0UF K	
C104			C93-1210-05	CHIP C 10UF K		C427			CK73FB1A225K	CHIP C 2.2UF K	
C105			CE32AU1C390M	CHIP EL 39UF 16WV		C428			CK73EB0J106K	CHIP C 10UF K	
C106			CK73GB1H103K	CHIP C 0.010UF K		C501-503			CK73HB1C103K	CHIP C 0.010UF K	
C107			C93-1210-05	CHIP C 10UF K		C504			CK73EB0J106K	CHIP C 10UF K	
C108			CE32AU1C390M	CHIP EL 39UF 16WV		C505			CK73HB1H271K	CHIP C 270PF K	

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO UNIT (X35-4280-01)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CN1			E40-9797-05	PIN ASSY	
CN301			E41-0341-05	FLAT CABLE CONNECTOR	
CN302			E41-0133-05	FLAT CABLE CONNECTOR	
CN303			E41-0404-05	FLAT CABLE CONNECTOR	
CN304			E40-9623-05	FLAT CABLE CONNECTOR	
CN305			E40-9708-05	PIN ASSY	
CN501		*	E41-2087-05	FLAT CABLE CONNECTOR	
CN502			E41-0133-05	FLAT CABLE CONNECTOR	
CN503			E41-0455-05	FLAT CABLE CONNECTOR	
CN601			E41-0340-05	FLAT CABLE CONNECTOR	
P1,2		*	E29-1963-05	PINCHER TIP	
F1			F53-0251-05	FUSE	
CF308			L72-0786-05	CERAMIC FILTER	
L1			L19-0727-05	TRANSFORMER FOR CONVERTER	
L101,102			L41-3392-13	SMALL FIXED INDUCTOR	
L103			L41-4792-13	SMALL FIXED INDUCTOR	
L104-106			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L301-303			L79-0982-05	LC FILTER	
L306			L40-5695-34	SMALL FIXED INDUCTOR (5.6UH)	
L309			L79-0982-05	LC FILTER	
L401			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L501			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
CP301,302			R90-1094-05	MULTI-COMP 1K X4	
CP303			R90-1524-05	MULTI-COMP 220 X4	
R1			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R3			RK73HB1J220J	CHIP R 22 J 1/16W	
R4			RN73GH1J153D	CHIP R 15K D 1/16W	
R5			RK73HB1J153J	CHIP R 15K J 1/16W	
R6			RN73GH1J623D	CHIP R 62K D 1/16W	
R7			RK73HB1J220J	CHIP R 22 J 1/16W	
R8			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R9			RK73GH1J244D	CHIP R 240K D 1/16W	
R10			RK73HB1J331J	CHIP R 330 J 1/16W	
R11			RK73HB1J220J	CHIP R 22 J 1/16W	
R12			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R13			RK73HB1J220J	CHIP R 22 J 1/16W	
R14			RN73GH1J4220D	CHIP R 422.0 D 1/16W	
R15			RN73GH1J513D	CHIP R 51K D 1/16W	
R16,17			RK73HB1J220J	CHIP R 22 J 1/16W	
R18			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R101			RK73GH1J104D	CHIP R 100K D 1/16W	
R102			RK73GH1J113D	CHIP R 11K D 1/16W	
R103			RK73GH1J184D	CHIP R 180K D 1/16W	
R104			RK73GH1J133D	CHIP R 13K D 1/16W	
R105			RK73HB1J473J	CHIP R 47K J 1/16W	
R106			RK73HB1J103J	CHIP R 10K J 1/16W	
R218			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R219			RK73HB1J513J	CHIP R 51K J 1/16W	
R234			RN73GH1J472D	CHIP R 4.7K D 1/16W	
R235			RN73GH1J912D	CHIP R 9.1K D 1/16W	
R236			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R239			RK73HB1J223J	CHIP R 12K J 1/16W	
R240			RK73HB1J220J	CHIP R 22 J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R241			RK73HB1J123J	CHIP R 12K J 1/16W	
R242			RK73HB1J220J	CHIP R 22 J 1/16W	
R253			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R307			RK73HB1J101J	CHIP R 100 J 1/16W	
R308			RK73HB1J621J	CHIP R 620 J 1/16W	
R311			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R313			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R314,315			RK73HB1J103J	CHIP R 10K J 1/16W	
R316			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R318			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R320			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R321			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R323			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R324,325			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R326			RK73HB1J473J	CHIP R 47K J 1/16W	
R327			RK73HB1J683J	CHIP R 68K J 1/16W	
R328			RK73HB1J153J	CHIP R 15K J 1/16W	
R329			RK73HB1J101J	CHIP R 100 J 1/16W	
R330			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R331			RK73HB1J331J	CHIP R 330 J 1/16W	
R332			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R333-335			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R337,338			RK73HB1J101J	CHIP R 100 J 1/16W	
R339			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340-344			RK73HB1J101J	CHIP R 100 J 1/16W	
R345			RK73HB1J683J	CHIP R 68K J 1/16W	
R346			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R347			RK73HB1J153J	CHIP R 15K J 1/16W	
R348			RK73HB1J362J	CHIP R 3.6K J 1/16W	
R349			RK73HB1J103J	CHIP R 10K J 1/16W	
R350-352			RK73HB1J101J	CHIP R 100 J 1/16W	
R353			RK73HB1J100J	CHIP R 10 J 1/16W	
R359,360			RK73HB1J100J	CHIP R 10 J 1/16W	
R361			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R362			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R367-369			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R371			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R373,374			RK73HB1J561J	CHIP R 560 J 1/16W	
R401			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R402			RK73HB1J432J	CHIP R 4.3K J 1/16W	
R403			RK73HB1J912J	CHIP R 9.1K J 1/16W	
R404			RK73HB1J303J	CHIP R 30K J 1/16W	
R421			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R422			RK73HB1J154J	CHIP R 150K J 1/16W	
R423			RK73HB1J104J	CHIP R 100K J 1/16W	
R441			RK73GB2A681J	CHIP R 680 J 1/10W	
R451,452			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453			RK73GB2A681J	CHIP R 680 J 1/10W	
R454			RK73GB2A331J	CHIP R 330 J 1/10W	
R455			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R456			RK73GB2A331J	CHIP R 330 J 1/10W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503-506			RK73EB2E100J	CHIP R 10 J 1/4W	
R641			RK73GB2A621J	CHIP R 620 J 1/10W	
R642			RK73HB1J391J	CHIP R 390 J 1/16W	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO UNIT (X35-4280-01)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R651			RK73HB1J000J	CHIP R 0.0 J 1/16W		C6			CC73HCH1E221J	CHIP C 220PF J	
R652			RK73FB2B471J	CHIP R 470 J 1/8W		C7			CK73HB1A104K	CHIP C 0.10UF K	
R654			RK73GB2A301J	CHIP R 300 J 1/10W		C8			CK73FB0J106M	CHIP C 10UF M	
VR203			R32-0235-05	SEMI FIXED VARIABLE RESISTOR		C9,10			CK73HB1A104K	CHIP C 0.10UF K	
VR301			R32-0245-05	SEMI FIXED VARIABLE RESISTOR		C11			CK73HB1H332K	CHIP C 3300PF K	
W107			R92-2052-05	CHIP R 0 OHM J 1/10W		C12			CK73HB1A104K	CHIP C 0.10UF K	
W216,217			R92-2052-05	CHIP R 0 OHM J 1/10W		C13			CK73FB0J106M	CHIP C 10UF M	
W301-304			R92-1252-05	CHIP R 0 OHM J 1/16W		C14			C92-1792-05	CHIP C 22UF M	
W310			R92-1252-05	CHIP R 0 OHM J 1/16W		C15			CK73HB1C103K	CHIP C 0.010UF K	
W354-358			R92-1252-05	CHIP R 0 OHM J 1/16W		C17			CC73GCH1H471J	CHIP C 470PF J	
S401-404			S70-0856-05	TACT SWITCH		C18			CK73HB1A104K	CHIP C 0.10UF K	
S601-603			S70-0856-05	TACT SWITCH		C19			CC73GCH1H471J	CHIP C 470PF J	
D1,2			MA8047-M	ZENER DIODE		C20			CK73HB1A333K	CHIP C 0.033UF K	
D3			MA115	DIODE		C21			CK73HB1A473K	CHIP C 0.047UF K	
D4,5			DA204U	DIODE		C22-24			CK73HB1A104K	CHIP C 0.10UF K	
D6			MA2S784	DIODE		C25,26			C93-1215-05	CHIP C 10UF M	
D7			MA8056-M	ZENER DIODE		C27			CK73HB1A104K	CHIP C 0.10UF K	
D8			1608SGXA	ZENER DIODE		C31			C92-1685-05	CHIP C 47UF M	
D9			DA204U	DIODE		C32,33			CC73GCH1E102J	CHIP C 1000PF J	
D10		*	AVRM1005270MAA	VARISTOR		C34,35			CC73GCH1H681J	CHIP C 680PF J	
D101		*	MA22D18	DIODE		C36			CK73HB1H222K	CHIP C 2200PF K	
D102-104			MA2S784	DIODE		C37			CC73GCH1H331J	CHIP C 330PF J	
D301			MA8051-M	ZENER DIODE		C38,39			CK73HB1C103K	CHIP C 0.010UF K	
D302,303			DA204U	DIODE		C40,41			CK73HB1A104K	CHIP C 0.10UF K	
D304			MA8051-M	ZENER DIODE		C42			CK73HB1C223K	CHIP C 0.022UF K	
D309			1SV231	VARIABLE CAPACITANCE DIODE		C43			CC73HCH1H470J	CHIP C 47PF J	
D310-313			1608SGXA	ZENER DIODE		C44			CC73GCH1H681J	CHIP C 680PF J	
D314			DA204U	DIODE		C45			CK73HB1E682K	CHIP C 6800PF K	
D401			1608SGXA	ZENER DIODE		C46			CK73HB1A104K	CHIP C 0.10UF K	
D403-410			AVRM1608180M6A	VARISTOR		C47			CC73GCH1E102J	CHIP C 1000PF J	
D501-504			MA8051-M	ZENER DIODE		C48-50			CK73HB1A104K	CHIP C 0.10UF K	
IC1			OZ960IS-C	ANALOGUE IC		C51			C93-1271-05	CHIP C 0.10UF M	
IC101			LT1947	ANALOGUE IC		C52-55			CK73HB1A104K	CHIP C 0.10UF K	
IC203			TA75W558FU	ANALOGUE IC		C56,57			C93-1271-05	CHIP C 0.10UF M	
IC301			TC200G02AF0104	MOS-IC		C58-60			CK73HB1A104K	CHIP C 0.10UF K	
IC302			TC7SH08FU	MOS-IC		C62			CK73HB1A104K	CHIP C 0.10UF K	
IC303			NJM2107F	ANALOGUE IC		C63			C93-1271-05	CHIP C 0.10UF M	
IC304			TC7WH14FU	MOS-IC		C64,65			CK73HB1C103K	CHIP C 0.010UF K	
IC401			TPS819	ANALOGUE IC		C67			CC73HCH1H220J	CHIP C 22PF J	
Q1			2SC4081	TRANSISTOR		C68			CC73HCH1H150J	CHIP C 15PF J	
Q2,3			SI5513DC	DUAL FET		C69-73			CK73HB1A104K	CHIP C 0.10UF K	
Q5			2SC4081	TRANSISTOR		C74			CK73EB1A106K	CHIP C 10UF K	
Q201			IMZ1A	DUAL TRANSISTOR		C75,76			CK73HB1C103K	CHIP C 0.010UF K	
Q202			2SD601A	TRANSISTOR		C77			CK73HB1A104K	CHIP C 0.10UF K	
Q203			2SB709A	TRANSISTOR		C78			CC73GCH1H331J	CHIP C 330PF J	
Q301			2SC4097	TRANSISTOR		C79-81			CK73HB1C103K	CHIP C 0.010UF K	
Q501			DTC124EE	DIGITAL TRANSISTOR		C82			CK73HB1A104K	CHIP C 0.10UF K	
Q502,503		*	PUMD10	DUAL TRANSISTOR		C83			CC73HCH1E221J	CHIP C 220PF J	
Q601			DTC124EE	DIGITAL TRANSISTOR		C84			CC73HCH1H101J	CHIP C 100PF J	
						C85			C92-1684-05	CHIP C 82UF K	
DVD PLAYER UNIT (X37-1020-04)						C87,88			CK73HB1C103K	CHIP C 0.010UF K	
C1			CK73FB0J106M	CHIP C 10UF M		C89			CK73FB0J106M	CHIP C 10UF M	
C2			CK73HB1A104K	CHIP C 0.10UF K		C90-95			CK73HB1A104K	CHIP C 0.10UF K	
C3,4			CK73FB0J106M	CHIP C 10UF M		C96			CK73GB1A224K	CHIP C 0.22UF K	
C5			CK73HB1A104K	CHIP C 0.10UF K		C97,98			CK73HB1A104K	CHIP C 0.10UF K	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

DVD PLAYER UNIT (X37-1020-04)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C99			C92-1685-05	CHIP C 47UF M	
C100			CK73GB0J105K	CHIP C 1.0UF K	
C101			CK73HB1C103K	CHIP C 0.010UF K	
C102			CK73FB0J106M	CHIP C 10UF M	
C103			CK73FB1A225K	CHIP C 2.2UF K	
C104			CK73HB1A104K	CHIP C 0.10UF K	
C106			CK73HB1A104K	CHIP C 0.10UF K	
C107			CK73GB0J105K	CHIP C 1.0UF K	
C108			C93-1228-05	CHIP C 10UF M	
C110-113			CC73HCH1H470J	CHIP C 47PF J	
C114,115			CK73FB1A225K	CHIP C 2.2UF K	
C116			CK73GB1A224K	CHIP C 0.22UF K	
C117			CK73HB1C223K	CHIP C 0.022UF K	
C119			CK73EB0J226K	CHIP C 22UF K	
C123			CC73HCH1H470J	CHIP C 47PF J	
C125-134			CK73HB1C103K	CHIP C 0.010UF K	
C135,136			CC73HCH1H050C	CHIP C 5.0PF C	
C137			CK73HB1H102K	CHIP C 1000PF K	
C138			CK73EB1A106K	CHIP C 10UF K	
CN1			E41-0273-05	FLAT CABLE CONNECTOR (30PIN)	
CN2			E41-0271-05	FLAT CABLE CONNECTOR (4PIN)	
CN3			E41-0272-05	FLAT CABLE CONNECTOR (11PIN)	
CN4			E41-0312-05	FLAT CABLE CONNECTOR (50PIN)	
CN5			E41-0335-05	FLAT CABLE CONNECTOR (4PIN)	
L1			L92-0365-05	CHIP FERRITE	
L2			L92-0329-05	CHIP FERRITE	
L3-8			L92-0365-05	CHIP FERRITE	
L10-13			L92-0365-05	CHIP FERRITE	
L16-18			L92-0365-05	CHIP FERRITE	
L21-27			L92-0365-05	CHIP FERRITE	
L28			L92-0375-05	CHIP FERRITE	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
CP1			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP3			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP4-8			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP9			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			R90-0726-05	MULTI-COMP 10K X2	
CP12			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP13-16			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R3,4			RK73GH1J103D	CHIP R 10K D 1/16W	
R5			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R6			RK73GB2A100J	CHIP R 10 J 1/10W	
R7,8			RK73HB1J273J	CHIP R 27K J 1/16W	
R9			RK73GH1J223D	CHIP R 22K D 1/16W	
R10			RK73GH1J392D	CHIP R 3.9K D 1/16W	
R11			RK73GH1J183D	CHIP R 18K D 1/16W	
R12			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13,14			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R15			RK73GB2A200J	CHIP R 20 J 1/10W	
R16			R92-3409-05	CHIP R 6.8 F 1/4W	
R17			R92-3350-05	CHIP R 2.2 F 1/10W	
R18			RK73GH1J221D	CHIP R 220 D 1/16W	
R19			RK73HB1J100J	CHIP R 10 J 1/16W	
R27,28			RK73HB1J472J	CHIP R 4.7K J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R29			RK73HB1J103J	CHIP R 10K J 1/16W	
R30			RK73HB1J473J	CHIP R 47K J 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R32			RK73GH1J153D	CHIP R 15K D 1/16W	
R33			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R36			RK73HB1J103J	CHIP R 10K J 1/16W	
R37			RK73HB1J273J	CHIP R 27K J 1/16W	
R38			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R39			RK73HB1J273J	CHIP R 27K J 1/16W	
R40			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R41			RK73HB1J103J	CHIP R 10K J 1/16W	
R42			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R43			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R44			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R45			RK73GH1J183D	CHIP R 18K D 1/16W	
R46			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R47			RK73GH1J103D	CHIP R 10K D 1/16W	
R48			R92-3353-05	CHIP R 1.0 F 1/8W	
R53			R92-3353-05	CHIP R 1.0 F 1/8W	
R54			R92-3348-05	CHIP R 0.47 F 1/2W	
R55,56			RK73GB2A820J	CHIP R 82 J 1/10W	
R57			RK73GB2A391J	CHIP R 390 J 1/10W	
R58,59			RK73GB2A103J	CHIP R 10K J 1/10W	
R60			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R61			RK73GB2A153J	CHIP R 15K J 1/10W	
R62,63			RK73GH1J153D	CHIP R 15K D 1/16W	
R64			RK73GH1J303D	CHIP R 30K D 1/16W	
R65			RK73GH1J183D	CHIP R 18K D 1/16W	
R66,67			RK73GH1J153D	CHIP R 15K D 1/16W	
R68			RK73GH1J513D	CHIP R 51K D 1/16W	
R71			RK73GH1J202D	CHIP R 2.0K D 1/16W	
R72			RK73GH1J123D	CHIP R 12K D 1/16W	
R73			RK73HB1J103J	CHIP R 10K J 1/16W	
R74			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R75-79			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R80-83			RK73HB1J103J	CHIP R 10K J 1/16W	
R88			RK73HB1J103J	CHIP R 10K J 1/16W	
R89			RK73HB1J820J	CHIP R 82 J 1/16W	
R90			RK73HB1J103J	CHIP R 10K J 1/16W	
R91			RK73HB1J220J	CHIP R 22 J 1/16W	
R92			RK73HB1J820J	CHIP R 82 J 1/16W	
R93			RK73HB1J103J	CHIP R 10K J 1/16W	
R94,95			RK73HB1J820J	CHIP R 82 J 1/16W	
R101			RK73HB1J103J	CHIP R 10K J 1/16W	
R103-106			RK73HB1J220J	CHIP R 22 J 1/16W	
R107,108			RK73HB1J103J	CHIP R 10K J 1/16W	
R109			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R110			RK73HB1J473J	CHIP R 47K J 1/16W	
R111			RK73GB2A150J	CHIP R 15 J 1/10W	
R112,113			RK73HB1J221J	CHIP R 220 J 1/16W	
R114			RK73HB1J220J	CHIP R 22 J 1/16W	
R117			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R119,120			RK73HB1J510J	CHIP R 51 J 1/16W	
R121,122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			R92-3385-05	CHIP R 8.2 F 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

DVD PLAYER UNIT (X37-1020-04)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R124			RK73HB1J103J	CHIP R 10K J 1/16W		C25			CC73GCH1H330J	CHIP C 33PF J	
R126,127			RK73HB1J104J	CHIP R 100K J 1/16W		C26,27			CK73GB1H222K	CHIP C 2200PF K	E1W1M1
R128,129			RK73HB1J472J	CHIP R 4.7K J 1/16W		C26,27			CK73GB1H222K	CHIP C 2200PF K	X1C1
R130			RK73HB1J751J	CHIP R 750 J 1/16W		C28			CK73GB1H103K	CHIP C 0.010UF K	
R131-143			RK73HB1J103J	CHIP R 10K J 1/16W		C29-32			CC73GCH1H101J	CHIP C 100PF J	
W1-3			R92-1252-05	CHIP R 0 OHM J 1/16W		C33			CK73GB1H222K	CHIP C 2200PF K	E1W1M1
S4			S68-0874-05	PUSH SWITCH		C33			CK73GB1H222K	CHIP C 2200PF K	X1C1
S5			S68-0866-05	PUSH SWITCH		C34,35			CK73GB1H103K	CHIP C 0.010UF K	E1W1M1
D1,2			MAZS0510M	ZENER DIODE		C34,35			CK73GB1H103K	CHIP C 0.010UF K	X1C1
D3-5			MA2J729	DIODE		C38			CK73GB1H103K	CHIP C 0.010UF K	
D6			MAZS0560M	ZENER DIODE		C39			CK73GB1H222K	CHIP C 2200PF K	
D7			MA4ZD03	DIODE		C40			CK73GB1H102K	CHIP C 1000PF K	
D8			MA142WA	DIODE		C41			C94-0054-05	ELECTRO 4.7UF 50WV	
IC1			AN8703FH	ANALOGUE IC		C42			CK73GB1H103K	CHIP C 0.010UF K	
IC2			NJU7042	ANALOGUE IC		C43			C94-0032-05	ELECTRO 47UF 6.3WV	
IC4			MN103S26E	MOS-IC		C44			CK73GB1H103K	CHIP C 0.010UF K	
IC4			MN103S26E2	MOS-IC		C45,46			C90-5573-05	ELECTRO 220UF 10WV	
IC5			S-80829CLBB	ANALOGUE IC		C47			CK73GB1H222K	CHIP C 2200PF K	
IC6			LA6505	ANALOGUE IC		C48			C94-0040-05	ELECTRO 22UF 16WV	
IC7			DF2328VTE250S0	MICROCONTROLLER IC		C49			CK73GB1H103K	CHIP C 0.010UF K	
IC8			S-80815CLBB	ANALOGUE IC		C50,51			C94-0054-05	ELECTRO 4.7UF 50WV	
IC9			UPC2918T	ANALOGUE IC		C52			C94-0041-05	ELECTRO 33UF 16WV	
IC10			NJM2880U33	ANALOGUE IC		C53-56			CC73GCH1H101J	CHIP C 100PF J	
IC11			S-24C04BMFN	MEMORY IC		C57			CK73GB1H103K	CHIP C 0.010UF K	
IC12			HD74LV2G66A	MOS-IC		C101			CC73GCH1H221J	CHIP C 220PF J	
Q1			2SB0970	TRANSISTOR		C102			CK73GB1H103K	CHIP C 0.010UF K	
Q2			MCH6101-E	TRANSISTOR		C103			CK73GB1E223K	CHIP C 0.022UF K	
Q3			2SJ0536	FET		C103			CK73GB1H223K	CHIP C 0.022UF K	
Q4			UN5114	DIGITAL TRANSISTOR		C104,105			CK73GB1C104K	CHIP C 0.10UF K	
Q5			UN5214	DIGITAL TRANSISTOR		C104,105			CK73GB1H104K	CHIP C 0.10UF K	
Q6			2SD1819A	TRANSISTOR		C106			CK73GB1H103K	CHIP C 0.010UF K	
Q9			UN5114	DIGITAL TRANSISTOR		C107			CK73GB1C104K	CHIP C 0.10UF K	
Q10			UN5214	DIGITAL TRANSISTOR		C107			CK73GB1H104K	CHIP C 0.10UF K	
Q13			UN5114	DIGITAL TRANSISTOR		C108			CK73GB1H103K	CHIP C 0.010UF K	
Q15			UN5114	DIGITAL TRANSISTOR		C109			CK73GB1E223K	CHIP C 0.022UF K	
TH1			TH11-3H103FT	THERMISTOR		C109			CK73GB1H223K	CHIP C 0.022UF K	
TUNER UNIT (X86-367x-xx)						C110,111			CK73GB1C104K	CHIP C 0.10UF K	
C1-4			CC73GCH1H101J	CHIP C 100PF J		C110,111			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73GB1H103K	CHIP C 0.010UF K		C112			CC73GCH1H100D	CHIP C 10PF D	K1R1H1
C6,7			CC73GCH1H101J	CHIP C 100PF J		C112,113			CC73GCH1H100D	CHIP C 10PF D	E1W1M1
C8			CK73GB1C104K	CHIP C 0.10UF K	E1W1	C112,113			CC73GCH1H100D	CHIP C 10PF D	X1C1
C8			CK73GB1H104K	CHIP C 0.10UF K	E1W1	C114			CK73GB1C104K	CHIP C 0.10UF K	
C9,10			CC73GCH1H101J	CHIP C 100PF J		C114			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	K1R1M1	C115			CC73GCH1H560J	CHIP C 56PF J	
C11			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1	C116			CK73GB1H222K	CHIP C 2200PF K	E1W1
C11-14			CK73GB1H103K	CHIP C 0.010UF K	E1W1	C117			CC73GCH1H220J	CHIP C 22PF J	E1W1
C15-18			CK73GB1H102K	CHIP C 1000PF K		C118			CK73GB1H102K	CHIP C 1000PF K	E1W1M1
C19			CK73GB1E223K	CHIP C 0.022UF K		C118			CK73GB1H102K	CHIP C 1000PF K	X1C1
C19			CK73GB1H223K	CHIP C 0.022UF K		C119			CK73GB1H103K	CHIP C 0.010UF K	K1R1H1
C20			CK73GB1H472K	CHIP C 4700PF K		C120			C94-0042-05	ELECTRO 47UF 16WV	
C21			CK73GB1H332K	CHIP C 3300PF K		C121			CK73GB1H103K	CHIP C 0.010UF K	
C22,23			CK73GB1H103K	CHIP C 0.010UF K		C122			CK73GB1E473K	CHIP C 0.047UF K	
C24			C94-0032-05	ELECTRO 47UF 6.3WV		C122			CK73GB1H473K	CHIP C 0.047UF K	
						C123			CK73GB1H103K	CHIP C 0.010UF K	
						C124			C94-0042-05	ELECTRO 47UF 16WV	K1R1H1

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C125			CK73GB1A474K	CHIP C 0.47UF K	E1W1
C125			CK73GB1E473K	CHIP C 0.047UF K	K1R1M1
C125			CK73GB1E473K	CHIP C 0.047UF K	H1X1C1
C125			CK73GB1H473K	CHIP C 0.047UF K	K1R1M1
C125			CK73GB1H473K	CHIP C 0.047UF K	H1X1C1
C126			CK73GB1C104K	CHIP C 0.10UF K	
C126			CK73GB1H104K	CHIP C 0.10UF K	
C127			CC73GCH1H471J	CHIP C 470PF J	
C128			CK73GB1H472K	CHIP C 4700PF K	
C129			CC73GCH1H560J	CHIP C 56PF J	M1X1C1
C130			CC73GCH1H330J	CHIP C 33PF J	
C131			CC73GCH1H270J	CHIP C 27PF J	
C132			CK73GB1H102K	CHIP C 1000PF K	
C133			CK73GB1C104K	CHIP C 0.10UF K	
C133			CK73GB1H104K	CHIP C 0.10UF K	
C134			C94-0051-05	ELECTRO 1UF 50WV	
C135			CK73GB1H222K	CHIP C 2200PF K	
C136			CK73GB1A224K	CHIP C 0.22UF K	
C137			CK73GB1H472K	CHIP C 4700PF K	
C138			C94-0051-05	ELECTRO 1UF 50WV	
C139			CK73GB1E473K	CHIP C 0.047UF K	
C139			CK73GB1H473K	CHIP C 0.047UF K	
C140			CK73GB1A224K	CHIP C 0.22UF K	
C141-143			CK73GB1H103K	CHIP C 0.010UF K	
C144			C94-0161-05	ELECTRO 0.47UF 50WV	
C145			CC73GCH1H100D	CHIP C 10PF D	
C146			C94-0042-05	ELECTRO 47UF 16WV	
C147			CK73GB1C104K	CHIP C 0.10UF K	
C147			CK73GB1H104K	CHIP C 0.10UF K	
C148			CK73GB1E223K	CHIP C 0.022UF K	
C148			CK73GB1H223K	CHIP C 0.022UF K	
C149			C94-0052-05	ELECTRO 2.2UF 50WV	
C150			CK73GB1H103K	CHIP C 0.010UF K	
C151			CK73GB1C104K	CHIP C 0.10UF K	
C151			CK73GB1H104K	CHIP C 0.10UF K	
C152,153			CK73GB1H102K	CHIP C 1000PF K	
C154			CK73GB1C104K	CHIP C 0.10UF K	
C154			CK73GB1H104K	CHIP C 0.10UF K	
C155			CC73GCH1H101J	CHIP C 100PF J	E1W1M1
C155			CC73GCH1H101J	CHIP C 100PF J	X1C1
C156			CK73GB1H103K	CHIP C 0.010UF K	K1R1H1
C157			CK73GB1A224K	CHIP C 0.22UF K	E1W1M1
C157			CK73GB1A224K	CHIP C 0.22UF K	X1C1
C201			C94-0039-05	ELECTRO 10UF 16WV	E1W1
C202			CK73GB1H103K	CHIP C 0.010UF K	E1W1
C203			CK73GB1A224K	CHIP C 0.22UF K	E1W1
C203			CK73GB1A474K	CHIP C 0.47UF K	K1R1M1
C203			CK73GB1A474K	CHIP C 0.47UF K	H1X1C1
C204,205			CK73GB1H222K	CHIP C 2200PF K	E1W1
C206,207			CK73GB1E223K	CHIP C 0.022UF K	E1W1
C206,207			CK73GB1H223K	CHIP C 0.022UF K	E1W1
C208			C94-0161-05	ELECTRO 0.47UF 50WV	E1W1
C209			C94-0044-05	ELECTRO 4.7UF 25WV	E1W1
C210-212			CK73GB1H103K	CHIP C 0.010UF K	E1W1
C211,212			CK73GB1H103K	CHIP C 0.010UF K	K1R1M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C211,212			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1
C213			C94-0039-05	ELECTRO 10UF 16WV	
C214			CK73GB1H103K	CHIP C 0.010UF K	
C218-220			CK73FB1C105K	CHIP C 1.0UF K	
C221			CK73GB1A474K	CHIP C 0.47UF K	K1R1M1
C221			CK73GB1A474K	CHIP C 0.47UF K	H1X1C1
C221			CK73GB1C104K	CHIP C 0.10UF K	E1W1
C221			CK73GB1H104K	CHIP C 0.10UF K	E1W1
C224			CK73GB1H103K	CHIP C 0.010UF K	
C225			CK73GB1C104K	CHIP C 0.10UF K	
C225			CK73GB1H104K	CHIP C 0.10UF K	
C226			CC73GCH1H560J	CHIP C 56PF J	
C227			CK73FB1C105K	CHIP C 1.0UF K	
C229,230			CK73GB1H103K	CHIP C 0.010UF K	
C231,232			CK73GB1E223K	CHIP C 0.022UF K	K1R1H1
C231,232			CK73GB1H153K	CHIP C 0.015UF K	E1W1M1
C231,232			CK73GB1H153K	CHIP C 0.015UF K	X1C1
C231,232			CK73GB1H223K	CHIP C 0.022UF K	K1R1H1
C233-236			CK73GB1H102K	CHIP C 1000PF K	
C237,238			CC73GCH1H121J	CHIP C 120PF J	
C239,240			CK73GB1H102K	CHIP C 1000PF K	
C241,242			CK73GB1H103K	CHIP C 0.010UF K	
C243			C94-0042-05	ELECTRO 47UF 16WV	
C245,246			CK73GB1A474K	CHIP C 0.47UF K	
CN1			E40-9636-05	FLAT CABLE CONNECTOR	
CN2			E40-9184-05	PIN ASSY	
CN3			E40-3640-05	PIN ASSY	
J1-4			E11-0625-05	PHONE JACK (LGY6502-0900)	
CF1		*	L72-0794-05	CERAMIC FILTER	K1R1H1
CF2			L72-0758-05	CERAMIC FILTER	E1W1M1
CF2			L72-0758-05	CERAMIC FILTER	X1C1
CF3			L72-0774-05	CERAMIC FILTER	E1W1M1
CF3			L72-0774-05	CERAMIC FILTER	X1C1
CF101			L72-0742-05	CERAMIC FILTER	
CF102			L72-0792-05	CERAMIC FILTER	K1R1H1
CF103			L72-0751-05	CERAMIC FILTER	E1W1M1
CF103			L72-0751-05	CERAMIC FILTER	X1C1
L1			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
L2			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
L3			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
L4			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
L5			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
L6			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
L7			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
L8			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
L9			L40-6805-34	SMALL FIXED INDUCTOR	
L10			L92-0329-05	CHIP FERRITE	
L11			L40-2795-34	SMALL FIXED INDUCTOR (2.7UH)	E1W1M1
L11			L40-2795-34	SMALL FIXED INDUCTOR (2.7UH)	X1C1
L12,13			L40-1295-34	SMALL FIXED INDUCTOR	E1W1M1
L12,13			L40-1295-34	SMALL FIXED INDUCTOR	X1C1
L13,14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	K1R1H1
L14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	E1W1M1
L14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	X1C1

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L15,16 L17 L101 L102 L103			L40-1005-34 L33-1152-05 L30-0756-05 L40-1505-34 L30-0745-05	SMALL FIXED INDUCTOR CHOKE COIL TV IFT SMALL FIXED INDUCTOR (15UH) TV IFT	K1R1H1 K1R1H1	R25 R26,27 R28 R29 R30			RK73GB2A151J RK73GB2A101J RK73GB2A151J RK73GB2A681J RK73GB2A123J	CHIP R 150 J 1/10W CHIP R 100 J 1/10W CHIP R 150 J 1/10W CHIP R 680 J 1/10W CHIP R 12K J 1/10W	X1C1
L103 L103 L104 L105 L105			L30-0749-05 L30-0749-05 L40-1001-78 L40-5695-34 L40-5695-34	TV IFT TV IFT SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (5.6UH) SMALL FIXED INDUCTOR (5.6UH)	E1W1M1 X1C1 E1W1M1 X1C1	R31 R32 R33 R34 R37			RK73GB2A222J RK73GB2A470J RK73GB2A122J RK73GB2A392J R92-1252-05	CHIP R 2.2K J 1/10W CHIP R 47 J 1/10W CHIP R 1.2K J 1/10W CHIP R 3.9K J 1/10W CHIP R 0 OHM J 1/16W	E1W1M1
L106 L108 L201,202 L202 L202			L40-1001-78 L40-2285-34 L40-1005-34 L40-1005-34 L40-1005-34	SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (0.22UH) SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR	M1X1C1 E1W1 K1R1M1 H1X1C1	R37 R38,39 R39 R101 R102			R92-1252-05 R92-1252-05 R92-1252-05 RK73GB2A102J RK73GB2A682J	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 1.0K J 1/10W CHIP R 6.8K J 1/10W	X1C1 K1R1H1 M1X1C1
X101 X102 X102 X103 X103			L77-2084-05 L77-2720-05 L77-2720-05 L77-2721-05 L77-2721-05	CRYSTAL RESONATOR (30.55MHZ) CRYSTAL RESONATOR (22.70MHZ) CRYSTAL RESONATOR (22.70MHZ) CRYSTAL RESONATOR (22.20MHZ) CRYSTAL RESONATOR (22.20MHZ)	K1R1H1 E1W1M1 X1C1 E1W1M1 X1C1	R103,104 R105 R105 R105 R106			RK73GB2A471J RK73GB2A333J RK73GB2A333J RK73GB2A473J RK73GB2A563J	CHIP R 470 J 1/10W CHIP R 33K J 1/10W CHIP R 33K J 1/10W CHIP R 47K J 1/10W CHIP R 56K J 1/10W	E1W1 E1W1M1 X1C1 K1R1H1
X104 X104 X105 X106 X106			L77-2722-05 L77-2722-05 L77-2095-05 L77-2096-05 L77-2096-05	CRYSTAL RESONATOR (21.70MHZ) CRYSTAL RESONATOR (21.70MHZ) CRYSTAL RESONATOR (3.58MHZ) CRYSTAL RESONATOR (4.43MHZ) CRYSTAL RESONATOR (4.43MHZ)	E1W1M1 X1C1 K1E1W1 M1H1X1	R107 R108,109 R110 R110 R111			RK73GB2A152J RK73GB2A331J RK73GB2A273J RK73GB2A273J RK73GB2A181J	CHIP R 1.5K J 1/10W CHIP R 330 J 1/10W CHIP R 27K J 1/10W CHIP R 27K J 1/10W CHIP R 180 J 1/10W	E1W1M1 X1C1 K1R1H1
X106 X106		*	L77-2096-05 L77-2835-05	CRYSTAL RESONATOR (4.43MHZ) CRYSTAL RESONATOR (3.575611MHZ)	C1 R1	R112 R113 R114,115 R116 R117			RK73GB2A333J RK73GB2A473J RK73GB2A331J RK73GB2A272J RK73GB2A103J	CHIP R 33K J 1/10W CHIP R 47K J 1/10W CHIP R 330 J 1/10W CHIP R 2.7K J 1/10W CHIP R 10K J 1/10W	K1R1H1
R1 R2-5 R6 R6 R7			RK73GB2A471J RK73GB2A101J RK73GB2A472J RK73GB2A472J RK73GB2A101J	CHIP R 470 J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W	E1W1M1 X1C1	R117 R119 R119 R120 R121			RK73GB2A103J RK73GB2A222J RK73GB2A222J RK73GB2A182J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 1.8K J 1/10W CHIP R 10K J 1/10W	X1C1 E1W1M1 X1C1 K1R1H1
R8 R9 R10 R11 R12-15			RK73GB2A473J RK73GB2A333J RK73GB2A822J RK73GB2A223J RK73GB2A102J	CHIP R 47K J 1/10W CHIP R 33K J 1/10W CHIP R 8.2K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	E1W1M1 X1C1	R122 R123 R124 R124 R125			RK73GB2A223J RK73GB2A103J RK73GB2A222J RK73GB2A222J RK73GB2A272J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.7K J 1/10W	K1R1H1 E1W1 E1W1M1 X1C1
R16 R16 R17,18 R17,18 R19			RK73GB2A682J RK73GB2A682J RK73GB2A103J RK73GB2A103J RK73GB2A222J	CHIP R 6.8K J 1/10W CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W	E1W1M1 X1C1 E1W1M1 X1C1 E1W1M1	R126 R126 R127 R127 R128			RK73GB2A104J RK73GB2A104J RK73GB2A222J RK73GB2A222J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W	E1W1M1 X1C1 E1W1M1 X1C1 E1W1M1
R19 R20 R20 R21 R21			RK73GB2A222J RK73GB2A470J RK73GB2A470J RK73GB2A681J RK73GB2A681J	CHIP R 2.2K J 1/10W CHIP R 47 J 1/10W CHIP R 47 J 1/10W CHIP R 680 J 1/10W CHIP R 680 J 1/10W	X1C1 E1W1M1 X1C1 E1W1M1 X1C1	R128 R129 R130 R130 R131,132			RK73GB2A104J RK73GB2A332J RK73GB2A104J RK73GB2A104J RK73GB2A103J	CHIP R 100K J 1/10W CHIP R 3.3K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	X1C1 K1R1H1 E1W1M1 X1C1 E1W1
R22 R22 R23 R23 R24			RK73GB2A222J RK73GB2A222J RK73GB2A123J RK73GB2A123J RK73GB2A470J	CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 12K J 1/10W CHIP R 12K J 1/10W CHIP R 47 J 1/10W	E1W1M1 X1C1 E1W1M1 X1C1 E1W1M1	R133 R134 R135 R136 R137			RK73GB2A472J RK73GB2A103J RK73GB2A273J RK73GB2A103J RK73GB2A393J	CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 27K J 1/10W CHIP R 10K J 1/10W CHIP R 39K J 1/10W	E1W1
R24 R25			RK73GB2A470J RK73GB2A151J	CHIP R 47 J 1/10W CHIP R 150 J 1/10W	X1C1 E1W1M1						

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R138 R139 R140 R141 R146,147			RK73GB2A103J RK73GB2A472J RK73GB2A103J RK73GB2A223J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	
R148 R149 R150,151 R152 R153			RK73GB2A561J R92-1252-05 RK73GB2A102J RK73GB2A561J RK73GB2A102J	CHIP R 560 J 1/10W CHIP R 0 OHM J 1/16W CHIP R 1.0K J 1/10W CHIP R 560 J 1/10W CHIP R 1.0K J 1/10W	
R154 R155 R157 R158 R160			RK73GB2A104J RK73GB2A102J RK73GB2A561J RK73GB2A153J RK73GB2A102J	CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 560 J 1/10W CHIP R 15K J 1/10W CHIP R 1.0K J 1/10W	
R161 R162 R163 R163 R164			RK73GB2A273J RK73GB2A104J RK73GB2A103J RK73GB2A103J RK73GB2A223J	CHIP R 27K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W	E1W1M1 X1C1 E1W1M1
R164 R165,166 R165,166 R167 R168			RK73GB2A223J RK73GB2A391J RK73GB2A391J RK73GB2A393J RK73GB2A391J	CHIP R 22K J 1/10W CHIP R 390 J 1/10W CHIP R 390 J 1/10W CHIP R 39K J 1/10W CHIP R 390 J 1/10W	X1C1 E1W1M1 X1C1
R169,170 R171 R171 R172 R172			RK73GB2A101J RK73GB2A470J RK73GB2A470J RK73GB2A471J RK73GB2A471J	CHIP R 100 J 1/10W CHIP R 47 J 1/10W CHIP R 47 J 1/10W CHIP R 470 J 1/10W CHIP R 470 J 1/10W	E1W1M1 X1C1 E1W1M1 X1C1
R173 R174 R175 R176 R177-180			RK73GB2A473J RK73GB2A513J RK73GB2A473J RK73GB2A333J R92-1252-05	CHIP R 47K J 1/10W CHIP R 51K J 1/10W CHIP R 47K J 1/10W CHIP R 33K J 1/10W CHIP R 0 OHM J 1/16W	K1R1H1
R177,178 R177,178 R181 R182 R182			R92-1252-05 R92-1252-05 RK73GB2A103J R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 10K J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	E1W1M1 X1C1 K1R1H1 E1W1M1 X1C1
R201 R202 R203 R204 R205			RK73GB2A822J RK73GB2A392J RK73GB2A473J RK73GB2A823J RK73GB2A124J	CHIP R 8.2K J 1/10W CHIP R 3.9K J 1/10W CHIP R 47K J 1/10W CHIP R 82K J 1/10W CHIP R 120K J 1/10W	E1W1 E1W1 E1W1
R207 R208 R211-214 R215,216 R217,218			RK73GB2A334J RK73GB2A474J RK73GB2A153J RK73GB2A683J RK73GB2A273J	CHIP R 330K J 1/10W CHIP R 470K J 1/10W CHIP R 15K J 1/10W CHIP R 68K J 1/10W CHIP R 27K J 1/10W	
R219 R220 R221 R221 R221			RK73GB2A823J RK73GB2A104J RK73GB2A223J RK73GB2A683J RK73GB2A683J	CHIP R 82K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 68K J 1/10W CHIP R 68K J 1/10W	K1R1H1 E1W1M1 X1C1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R222 R222 R222 R223 R227			RK73GB2A124J RK73GB2A473J RK73GB2A473J RK73GB2A102J RK73GB2A472J	CHIP R 120K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W	K1R1H1 E1W1M1 X1C1
R228,229 R228,229 R229 VR1 VR101			R92-1252-05 R92-1252-05 R92-1252-05 R32-0234-05 R32-0234-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR	K1R1M1 H1X1C1 E1W1 K1R1H1
VR102			R32-0246-05	SEMI FIXED VARIABLE RESISTOR	K1R1H1
D1-4 D5 D5 D6 D101			RN739F DAN235U DAN235U 1SS250 DA204U	DIODE DIODE DIODE DIODE DIODE	E1W1M1 X1C1
D102,103 D102,103 D104 D105 D105,106			DAP236U DAP236U DAN235U DA204U DA204U	DIODE DIODE DIODE DIODE DIODE	E1W1M1 X1C1 E1W1 K1R1H1 E1W1M1
D105,106 IC1 IC2 IC3 IC101			DA204U BA7652AF CM0018AM BA6161F AN5186FBV	DIODE ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC	X1C1 E1W1
IC102 IC201 IC202 IC203,204 Q1			TDA8842H*B TDA9830T AN5281NSC NJM4565M-TE2 DTA114EUA	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC DIGITAL TRANSISTOR	E1W1 E1W1
Q1 Q2 Q2 Q2 Q2			UN5111 DTC124EUA DTC124EUA UN5212 UN5212	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E1W1 E1W1M1 X1C1 E1W1M1 X1C1
Q3 Q3 Q3 Q3 Q4,5			DTC143TUA DTC143TUA UN5216 UN5216 2SC2714(Y)	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E1W1M1 X1C1 E1W1M1 X1C1 E1W1M1
Q4,5 Q5 Q101,102 Q101,102 Q102			2SC2714(Y) 2SC2714(Y) 2SC4081 2SD1819A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	X1C1 K1R1H1 E1W1 E1W1 M1X1C1
Q102 Q102,103 Q102,103 Q104-106 Q104-106			2SD1819A 2SC4081 2SD1819A DTC124EUA UN5212	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1X1C1 K1R1H1 K1R1H1 M1X1C1 M1X1C1
Q104-107 Q104-107 Q108,109			DTC124EUA UN5212 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E1W1 E1W1

K : KVT-915DVD **R1** : KVT-915DVD **M1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
Q108,109			2SD1819A	TRANSISTOR		36	2B		D13-2225-04	GEAR	
Q111-114			2SC4081	TRANSISTOR	K1R1H1	37	2B		D13-2226-04	GEAR	
Q111-114			2SD1819A	TRANSISTOR	K1R1H1	38	3B		D13-2227-04	GEAR	
Q111-115			2SC4081	TRANSISTOR	E1W1M1	43	2A		D14-0785-04	ROLLER	
Q111-115			2SC4081	TRANSISTOR	X1C1	44	1A		D21-2395-13	SHAFT	
Q111-115			2SD1819A	TRANSISTOR	E1W1M1	46	2B		D21-2414-04	SHAFT	
Q111-115			2SD1819A	TRANSISTOR	X1C1	48	1B		D32-0648-04	STOPPER	
Q116			2SA1576A	TRANSISTOR	E1W1M1	49	2B		D32-0654-04	STOPPER	
Q116			2SA1576A	TRANSISTOR	X1C1	50	2A		D39-0254-05	DAMPER	
Q116			2SB1218A	TRANSISTOR	E1W1M1						
Q116			2SB1218A	TRANSISTOR	X1C1	VFC1	2A		E39-0464-05	FLAT CABLE (4PIN)	
Q117-119			DTC144EUA	DIGITAL TRANSISTOR		54	2B		F09-1748-04	SHEET	
Q117-119			UN5213	DIGITAL TRANSISTOR							
Q201,202			DTC144EUA	DIGITAL TRANSISTOR		56	1A		G01-3112-04	COMPRESSION SPRING	
Q201,202			UN5213	DIGITAL TRANSISTOR		60	2B		G01-3117-04	EXTENSION SPRING	
A1			W02-3191-15	TUNER ASSY	E1W1M1	61	1B		G01-3118-04	EXTENSION SPRING	
A1			W02-3191-15	TUNER ASSY	X1C1	62	2A		G01-3119-04	EXTENSION SPRING	
A1			W02-3389-05	TUNER ASSY	K1R1H1	63	3A		G01-3121-14	TORSION COIL SPRING	
COMPOUND ASSY UNIT (X90-373x-xx)						64	3B		G01-3140-04	EXTENSION SPRING	
350	1H	*	A01-2813-01	METALLIC CABINET		65	3B		G01-3142-04	TORSION COIL SPRING	
354	3H	*	E30-4972-15	GROUND WIRE		69	2A		G02-1421-03	FLAT SPRING	
FC4	2H	*	E39-0555-05	FLAT CABLE		78	3B		J21-9792-03	MOUNTING HARDWARE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K1R1M1	79	1A		J21-9793-12	MOUNTING HARDWARE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	H1X1C1	82	2A		J90-1031-21	GUIDE	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1W1	A	1A		N09-4495-05	ADJUSTABLE SCREW (ADJUSTMENT SC)	
A	3H		N09-1515-05	TAPPING SCREW (3X8)		B	1A		N09-4496-05	TAPTITE SCREW (02 2X5P-TITE)	
E	3H		N80-3008-46	PAN HEAD TAPTITE SCREW		C	1B		N09-6060-05	MACHINE SCREW (02M1.7X1.8 CR)	
F	2H		N89-3006-41	BINDING HEAD TAPTITE SCREW		D	2B		N09-6061-05	MACHINE SCREW (02M1.7X3.5CUP)	
H	1H		N89-3006-45	BINDING HEAD TAPTITE SCREW		E	1A		N09-6103-05	MACHINE SCREW (M1.7X3.5(NK G)	
DVD MECHANISM ASSY (X92-5020-00)						F	1A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
1	2B		A10-4909-21	CHASSIS		G	1B		N09-6106-05	MACHINE SCREW (M1.7X2.5)	
2	1A		A10-4910-11	CHASSIS		J	2A		N19-2022-04	FLAT WASHER	
3	1A		A10-4911-02	CHASSIS		K	3A		N19-2171-04	FLAT WASHER	
5	2B	*	A10-4952-61	CHASSIS ASSY		VM1	2B		T42-1058-15	MOTOR ASSY	
7	1B	*	A10-4990-33	CHASSIS ASSY		VM2	3A		T49-0101-05	MOTOR ASSY	
15	3B		D10-4650-03	SLIDER		VM3	3B		T42-1061-04	MOTOR ASSY	
16	3B		D10-4651-02	SLIDER		VPU1	1A		T25-0222-05	OPTICAL PICKUP HEAD	
17	3B		D10-4652-02	SLIDER		83	2A		W02-3408-15	ELECTRIC CIRCUIT MODULE	
18	2A		D10-4653-02	SLIDER							
19	3B		D10-4654-04	ARM ASSY							
20	3A		D10-4658-33	ARM ASSY							
21	1B		D10-4659-43	LEVER ASSY							
22	1A		D10-4660-04	ARM ASSY							
23	3B		D10-4686-03	SLIDER							
24	3B		D10-4687-03	ARM							
25	3B		D10-4689-03	ARM							
26	3B		D10-4690-03	ARM							
29	1A		D12-0635-03	CAM							
30	2B		D12-0636-13	CAM							
32	3B		D13-2221-04	GEAR							
33	3B		D13-2222-04	GEAR							
34	3B		D13-2223-04	GEAR							
35	3B		D13-2224-04	GEAR							

K : KVT-915DVD R1 : KVT-915DVD M1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.